



OPERATIONS MANUAL

RFX MP3.8 MMC (MULTI-MEDIACARD) CHANGER OPERATION

1. LOADING MMC (MULTIMEDIA CARD)

Insert an MMC (MultiMedia Card) into the desired MMC slot until you hear the a click . The LED above the slot will light up.

To pull out the MMC from the slot, push the MMC in the slot again until you hear the a click.

The MMC slots are numbered above the magazine.

2. MMC CHANGER MODE

Press the MODE button until the CDX PLAY is displayed.

The MMC Changer will immediately begin playing the track #1 of the first available MMC card.

If the changer was previously initialized, the changer will resume playing the last track initialized.

LCD DISPLAY

The LCD will continuously flash the number of the currently playing MediaCard.

When a MediaCard begins playing, the track # and elapsed time will be displayed for 5 seconds. After 5 seconds, the LCD will revert to the default display.

NOTE: If no disc is loaded into the MMC Changer, NO CD will be displayed and the source unit will revert back to TUNER mode.

3. CDX DISC SELECTION

DISC SELECTION

Press the TUNE UP button to select the next MediaCard in the magazine.

Press the TUNE DN button to select the previous MediaCard in the magazine.

CONSIDERATIONS

CDX MODE : When the last track # on the current MediaCard is reached, the next MediaCard will be loaded in the MMC changer and begin playing track #1.

4. SEEK (TRACK)

Track Selection (CDX Mode)

Press the SEEK UP button to play the next track.

Press the SEEK DN button to play the previous track.

5. DISPLAY RECALL

Display Recall (CDX)

While in CDX mode, press the DISP button to cycle through CLOCK>TRACK/TIME/DISC TITLE*.

Ex) PM 12:01

T01 01:24

6. TRACK REPEAT (RPT BUTTON)

Track Repeat plays the currently playing track over again from the beginning.

TRACK REPEAT

Press the RTP button to begin the Track Repeat mode.

Track Repeat will continue to repeat the current track until the mode is cancelled.

TRACK REPEAT CANCEL

Press the RTP button a second time to cancel the Track Repeat mode.

LCD DISPLAY

The LCD will display RPT until the function is cancelled.

7. TRACK RANDOM (RDM BUTTON)

Track Random selects and plays tracks at random from the currently playing MediaCard.

TRACK RANDOM

Press the RDM button to begin the Track Random mode.

Track Random will continue to select and play tracks at random until the mode is cancelled.

TRACK RANDOM CANCEL

Press the RDM button a second time to cancel the Track Random mode.

LCD DISPLAY

The LCD will display RDM until the function is cancelled.

**REMOTE CONTROL
(AVAILABLE WITH THE RFX8310, RFX8320, RFX8330,
RFX8340, RFX8350)**



1. DIRECT DISC ACCESS

Direct Disc Access allows any MediaCard in the magazine to be immediately selected and played. This method is faster than manually cycling through each disc in the magazine.

DIRECT DISC ACCESS

While in CDX mode, press the DISC ACC button to select Direct Disc Access mode. Press the desired disc number in the magazine.

The MMC changer will immediately load the selected disc and begin playing track #1.

LCD DISPLAY

The LCD will display DISC and the disc # being accessed for 5 seconds. After 5 seconds, the LCD will revert to the default display.

2. DIRECT TRACK ACCESS

Direct Track Access allows any track to be immediately selected and played. This method is faster than manually cycling through each track on the MediaCard.

DIRECT TRACK ACCESS

While in CDX mode, press the TRACK ACC button to select Direct Track Access mode. Press the number to access the desired track on the MediaCard.

The MMC changer will immediately load the selected track and begin playing.

LCD DISPLAY

The LCD will display TRACK and the track # being accessed for 5 seconds. After 5 seconds the LCD will revert to the default display.