

# 2016-2018 Polaris® General® GNRL-STAGE3 & STAGE4



**FRONT INPUT LEVEL: 01:00 (5/8)**  
Matches radio output voltage to amp input.

**REAR INPUT LEVEL: 03:00 (3/4)**  
Matches radio output voltage to amp input.

FRONT, REAR & SUB AMPLIFIER

**FRONT/REAR EQUALIZER: MIN**  
Compensates for bass anomalies in vehicle.  
Not used in "open air" UTVs.

**INPUT SWITCH: 4CH**  
Number of inputs to feed all 4-channels of the amplifier.

Rockford Fosgate

**FRONT/REAR CROSSOVER FREQUENCY: 80Hz**  
Tells amp what frequencies to pass by removing inaudible frequencies, allowing system to play louder (linked to HP/AP/LP switch.)

**FRONT CROSSOVER: HP (High-Pass)**  
Tells amp to send only high frequencies to midrange/tweeters (linked to crossover frequency.)

**REAR CROSSOVER: LP (Low-Pass)**  
Tells amp to send only low frequencies to subwoofer (linked to crossover frequency.)