

2015-2017 Polaris® Ranger® RNGR-STAGE3 & STAGE4



FRONT INPUT LEVEL: 01:00 (5/8)
Matches radio output voltage to amp input.

REAR INPUT LEVEL: 03:00 (3/4)
Matches radio output voltage to amp input.

FRONT, REAR & SUB AMPLIFIER

FRONT/REAR EQUALIZER: MIN
Compensates for bass anomalies in vehicle.
Not used in "open air" UTVs.

INPUT SWITCH: 4CH
Number of inputs to feed all 4-channels of the amplifier.

Rockford Fosgate

FRONT/REAR CROSSOVER FREQUENCY: 80Hz
Tells amp what frequencies to pass by removing inaudible frequencies, allowing system to play louder (linked to HP/AP/LP switch.)

FRONT CROSSOVER: HP (High-Pass)
Tells amp to send only high frequencies to midrange/tweeters (linked to crossover frequency.)

REAR CROSSOVER: LP (Low-Pass)
Tells amp to send only low frequencies to subwoofer (linked to crossover frequency.)