



**NOTE: Button Functions**

Refer to page 12 of the Installation and Operation manual.

The PTY button functions the same as the BSM button(Best Station Memory - Item 12) except as noted below. The TA/AF button functions the same as the P/SCAN button (Preset Scan - item 13) except as noted below.

**DEFAULT SETTING**

Default setting for AREA on RDS models is for Europe.

The default setting in FM Mode are; AF - ON / TA - OFF / PTY - PTY None

**1. PTY Button**

PTY (Program Type) can search for radio stations via MUSIC MODE or SPEECH MODE networks. Music Mode categorizes radio stations into Pop, Rock, Modern Music, Light, Classics, and others. Speech Mode categorizes music into News, Affairs, Info, Sports, Education, Drama, Culture, Science and Varied.

**Program Type Mode (PTY)**

1. Press the PTY button for 1 second to cycle between MUSIC, SPEECH, and PTY OFF.

**NOTE:** If the PTY button is pressed for less than 1 second, the button changes to BSM mode (Best Station Memory).

2. Press the ENTER button (Volume) to cycle through the mode type (refer to chart).

PTY >	Music Mode	Speech Mode
Press ENTER	POP M	NEWS
	ROCK M	AFFAIRS
	M.O.R.M.	INFO
	LIGHT M	SPORT
	CLASSICS	EDUCATE
	OTHER M	DRAMA
	-	CULTURE
	-	SCIENCE
	-	VARIED

**2. TA/AF Button**

TA (Traffic Announcement) Mode will automatically switch to receive a Traffic Announcement regardless of the current operating mode of the unit. EON TA are stations that do not have a TRAFFIC PROGRAM but can provide information on other radio stations that do.

AF (Alternative Frequencies) Mode compares the signal level of the current station with the signal level of other alternative frequencies on the same radio network (see PTY Mode). If the AF provides a stronger signal than the current frequency, the radio will switch to the stronger AF.

**Traffic Announcement Mode (TA)**

**NOTE:** TA button operates in all modes except for radio MW mode.

1. Press the TA/AF button to engage TA Mode, and again to disengage TA Mode.
2. When TA is "ON" and starts communication, the unit displays "TRAFFIC".

**Alternative Frequencies Mode (AF)**

1. Press and hold the TA/AF button for 1 second to engage AF Mode.
2. Press and hold TA/AF again for 1 second to disengage AF Mode.