

Installation assistance available at:

RFTECH

www.rockfordfosgate.com/rftech

YAMAHA® YXZ®
FRONT SUBWOOFER
ENCLOSURE

RFYXZ-FWE

600 South Rockford Drive • Tempe, Arizona 85281 United States
Direct: (480) 967-3565 • Toll Free: (800) 669-9899

ROCKFORD FOSGATE . COM



Serial Number: _____

Date of Purchase: _____



Installation & Operation

Introduction

Dear Customer,

Congratulations on your purchase of the world's finest brand of audio products. At Rockford Fosgate we are fanatics about musical reproduction at its best, and we are pleased you chose our product. Through years of engineering expertise, hand craftsmanship and critical testing procedures, we have created a wide range of products that reproduce music with all the clarity and richness you deserve.

For maximum performance we recommend you have your new Rockford Fosgate product installed by an Authorized Rockford Fosgate Dealer, as we provide specialized training through Rockford Technical Training Institute (RTTI). Please read your warranty and retain your receipt and original carton for possible future use.

Great product and competent installations are only a piece of the puzzle when it comes to your system. Make sure that your installer is using 100% authentic installation accessories from Rockford Fosgate in your installation. Rockford Fosgate has everything from RCA cables and speaker wire to power wire and battery connectors. Insist on it! After all, your new system deserves nothing but the best.

To add the finishing touch to your new Rockford Fosgate image order your Rockford accessories, which include everything from T-shirts to hats.

Visit our web site for the latest information on all Rockford products;

www.rockfordfosgate.com

or, in the U.S. call 1-800-669-9899 or FAX 1-800-398-3985. For all other countries, call +001-480-967-3565 or FAX +001-480-966-3983.

Table of Contents

2	Introduction
3-10	Installation
12	Warranty

If, after reading your manual, you still have questions regarding this product, we recommend that you see your Rockford Fosgate dealer. If you need further assistance, you can call us direct at **1-800-669-9899**. Be sure to have your serial number, model number and date of purchase available when you call.

PRACTICE SAFE SOUND

Continuous exposure to sound pressure levels over 100dB may cause permanent hearing loss. High powered auto sound systems may produce sound pressure levels well over 130dB. Use common sense and practice safe sound.

Safety

This symbol with "WARNING" is intended to alert the user to the presence of important instructions. Failure to heed the instructions will result in severe injury or death.



This symbol with "CAUTION" is intended to alert the user to the presence of important instructions. Failure to heed the instructions can result in injury or unit damage.



- To prevent injury and damage to the unit, please read and follow the instructions in this manual. We want you to enjoy this system, not get a headache.
- If you feel unsure about installing this system yourself, have it installed by a qualified Rockford Fosgate technician.
- Before installation, disconnect the battery negative (-) terminal to prevent damage to the unit, fire and/or possible injury.

Contents

- (1) Front Subwoofer Enclosure
- (1) Wire Harnesses
- Mounting Hardware
- Plastic Wire Tie Wraps
- Foam Tape

Installation Tools

The following is a list of suggested tools needed for installation:

- Small Flat Blade Screwdriver
- Large Ratchet
- 10 mm Socket
- 17 mm Socket
- Allen Wrench
- Wire Cutters
- Panel Tool
- Jigsaw
- Masking Tape

Installation Considerations

This section focuses on some considerations for installing your Yamaha YXZ subwoofer kit. This manual will illustrate the installation process with a 2017 Yamaha YXZ1000R SS with a RFYXZ-FWE subwoofer enclosure.

If you feel unsure about installing this system yourself, have it installed by a qualified technician.

WARNING

When drilling holes, make sure what is on the other side. Be sure that any electrical, fuel lines or any other important components are free and clear from the area.

CAUTION

Before installation, disconnect the battery negative (-) terminal to prevent damage to the unit, fire and/or possible injury.

CAUTION

Before beginning any installation, follow these simple rules:

- Be sure to carefully read and understand the instructions before attempting to install this wiring kit.
- Consult your UTV's service manual for model specific information. Models may differ from year to year depending on factory options and aftermarket accessories added.
- This subwoofer kit is specifically designed to work with Rockford Fosgate's PM and RM series of subwoofers.
- With the addition of an amplifier or source unit, be sure that your current charging system is in proper working order.
- Visit **rockfordfosgate.com** for more comprehensive product information.
- Visit our **YouTube** channel for comprehensive installation videos.



Installation

Applicable Models:

2016 & Up YXZ1000R/YXZ1000R SS

This front subwoofer enclosure is designed to work with Rockford Fosgate's RFXYZ-K8 amplifier kit.

NOTE: Some additional interior pieces were removed to make photography easier for documenting the installation process.



Step 1 - Remove Driver's Side Skid Plate

Remove skid plate on drivers side using 10mm. There are (11) bolts total securing it to the chassis.



Step 2 - Remove Driver's Seat

Remove driver's side seat bottom by pulling up from the front of the seat.



Remove driver's side seat back using a 12mm socket. 4 bolts





Step 3 - Remove the Center Console

Using your hand, pull up on the backside of the center console to release it.



NOTE: When removing, be sure to make sure the rubber grommets are in good condition and inserted correctly. If they are not installed properly, the center console will not engage the correct way or attach securely.

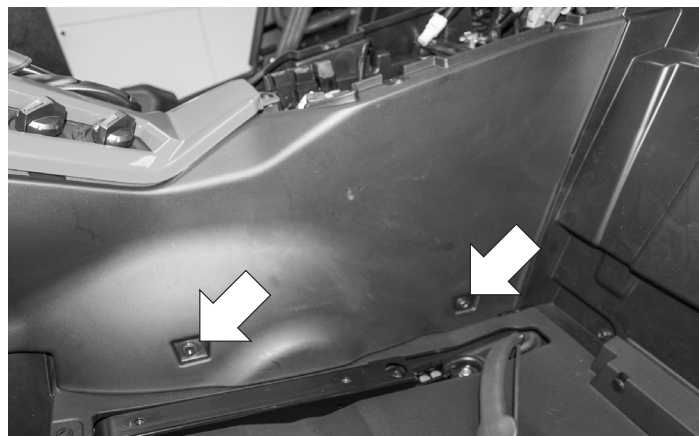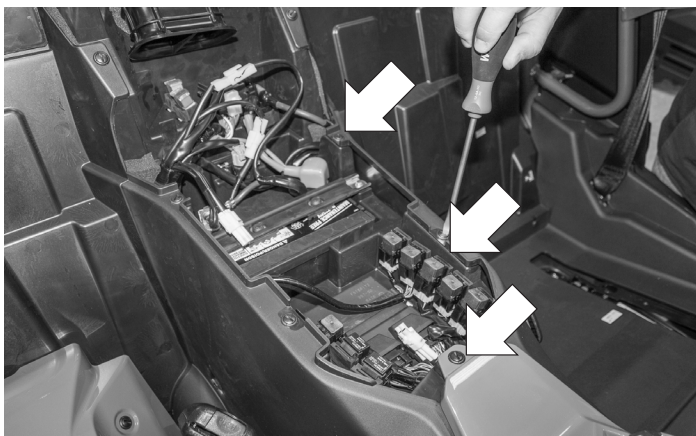

Step 4 - Remove Driver Side Transmission Panel

After the center console is out of the way, remove these (3) plastic rivets with a flat blade screwdriver.




Once the plastic rivets are removed, lift up on the shifter surround plastic to expose (2) more rivets needed for the removal of the plastic side panel.



Step 5 - Loosen Outer Side Panel

Remove the (2) plastic rivets that are located on the front side of the seat base.

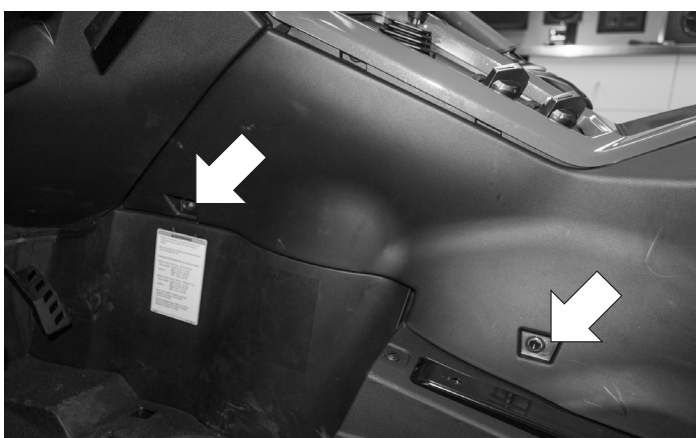

Remove the driver's side transmission tunnel panel with (3) 10 mm sockets and (2) plastic rivets.

Installation



Remove the 10 mm bolt below the latch.



On the inside of the vehicle, there is another 10 mm bolt that needs to be removed.



Remove the bolt at the latch using a 10 mm socket.



Step 6 - Seat Pan and Driver Area Panel Removal

Remove the lower seat belt bolt using 17 mm socket.



On the outside of the vehicle there is another bolt that needs to be removed using an allen wrench.



Remove the plastic seat panel by removing the (4) plastic rivets. Once the rivets are removed, lift up from the backside of the panel first and then maneuver around the slider handle to get out of vehicle.



Remove the seat slider using a 12 mm socket. There are (4) bolts securing it in place.



Take the (4) plastic rivets out to remove seat pan.




Remove the back plastic panel that is behind the seat with the (4) plastic rivets, one bolt up lower front and one bolt in the back using 10 mm.



Step 7 - Installing the Subwoofer Into the Enclosure

Wire up the subwoofer in series for a 4 ohm load using the supplied jumper wire.

NOTE: The jumper wire will need to go to from a (+) positive terminal to an opposite (-) negative terminal on the subwoofer.

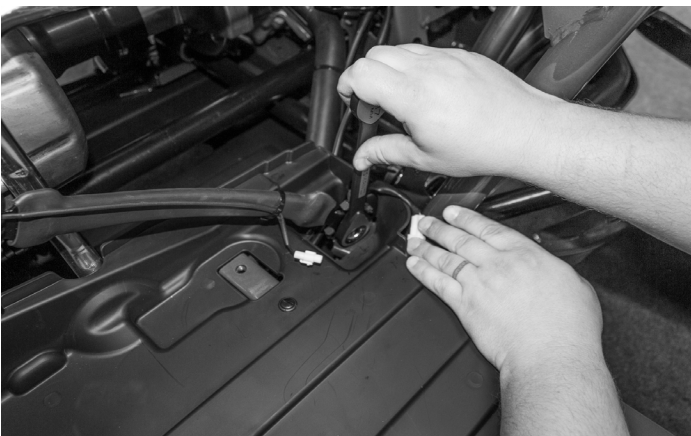

Take the other seat bolt out using your 17 mm socket.



Once wired up, insert into the subwoofer enclosure.

Installation



Secure with the screws supplied with the enclosure.

Note: do not install the subwoofer grille. Installing it will interfere with the seat slider rail.



(2) bolts up front secure the bracket to the enclosure and (2) in the back. Keep everything loose until all hardware is in place. Once all bolts are in place, secure the bolts moving from back to front.



Step 7 - Install the Subwoofer Enclosure

Now the subwoofer enclosure will need to have the included bracket installed onto the chassis cross brace using (2) bolts. Keep loose until all hardware is installed. Use a 10 mm socket and wrench.




Place the enclosure inside the car and secure it with (4) bolts using a 10 mm.



Connect subwoofer harness to wiring pigtail on the subwoofer enclosure.



Route the subwoofer wire harness along the chassis to the center console and secure with (3) plastic wire ties. Plug directly into the RFYXZ-K8 amplifier kit.

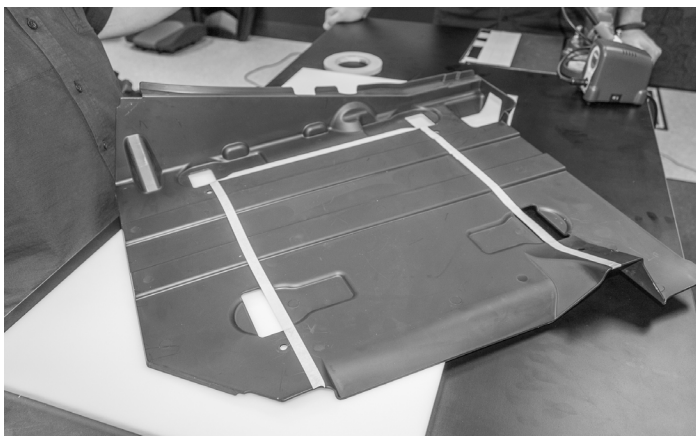

Step 8 - Trim Seat Pan

Using tape mark your cut lines on the panel. You will use the existing holes in the panel to cut along.



Using a jigsaw, cut out the under seat panel.




Step 9 - Reassembly

Apply Foam on the vehicle cross members 4 total pieces.




Place the cut under seat panel back into the vehicle and secure.

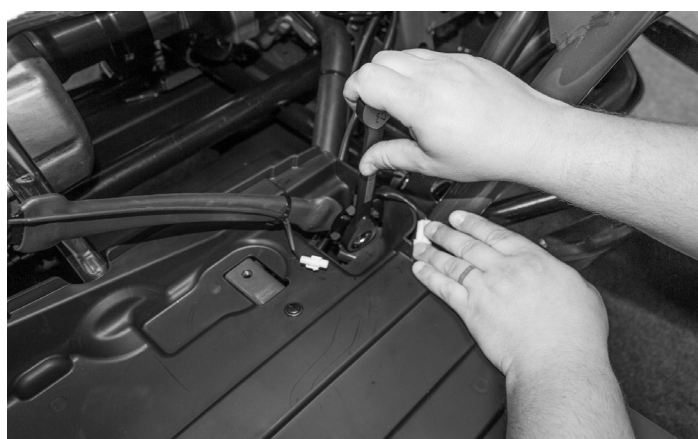

Reattach the seat belt buckle and plug.

Installation

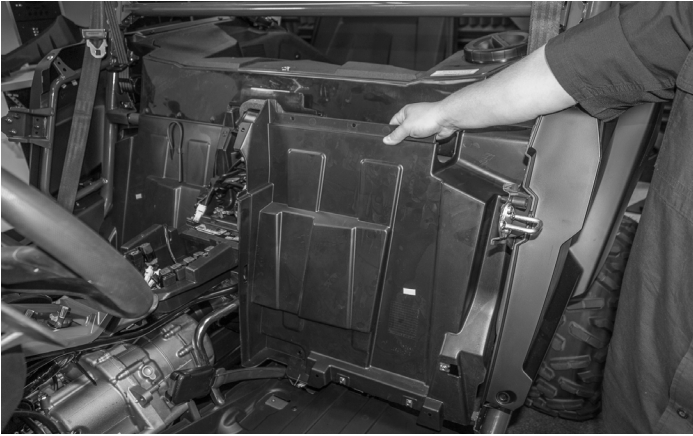

Reinstall the back panel.



Install the skid panel back on to the vehicle.



Bolt in the seat slider and apply foam to the slider tube to prevent rattles.



Reinstall the other under seat panel and exterior panel.

Warranty

Rockford Corporation offers a limited warranty on Rockford Fosgate products on the following terms:

Length of Warranty

POWER Amplifiers – 2 Years
BMW® Direct Fit Speakers – 2 Years
PUNCH® & PRIME® Amplifiers – 1 Year
Speakers, Signal Processors, Accessories and Capacitors – 1 Year
All marine, motorcycle, motorsport products – 2 Years
Any Factory Refurbished Product – 90 Days (receipt required)

What is Covered

This warranty applies only to Rockford Fosgate products sold to consumers by authorized Rockford Fosgate dealers in the United States of America. Products purchased by consumers from an Authorized Rockford Fosgate Dealer in another country are covered only by that country's Distributor and not by Rockford Corporation.

Who is Covered

This warranty covers only the original purchaser of Rockford product purchased from an authorized Rockford Fosgate dealer in the United States. In order to receive service, the purchaser must provide Rockford with a copy of the receipt stating the customer name, dealer name, product purchased and date of purchase.

Products found to be defective during the warranty period will be repaired or replaced (with a product deemed to be equivalent) at Rockford's discretion.

What is Not Covered

1. Damage caused by accident, abuse, improper installation, operations, theft, water (on non-Element Ready products).
2. Any cost or expense related to the removal or reinstallation of product.
3. Service performed by anyone other than Rockford or an authorized Rockford Fosgate service center.
4. Any product which has had the serial number defaced, altered, or removed.
5. Subsequent damage to other components.
6. Any product purchased outside the U.S.
7. Any product not purchased from an authorized Rockford Fosgate dealer. Refer to rockfordfosgate.com dealer locator for more detail.

Limit on Implied Warranties

Any implied warranties including warranties of fitness for use and merchantability are limited in duration to the period of the express warranty set forth above. Some states do not allow limitations on the length of an implied warranty, so this limitation may not apply. No person is authorized to assume for Rockford Fosgate any other liability in connection with the sale of the product.

How to Obtain Service

Please call 1-800-669-9899 for Rockford Customer Service. You must obtain an RA# (Return Authorization number) to return any product to Rockford Fosgate. You are responsible for shipment of product to Rockford.

EU Warranty

This product meets the current EU warranty requirements, see your Authorized dealer for details.