



# ! ATTENTION

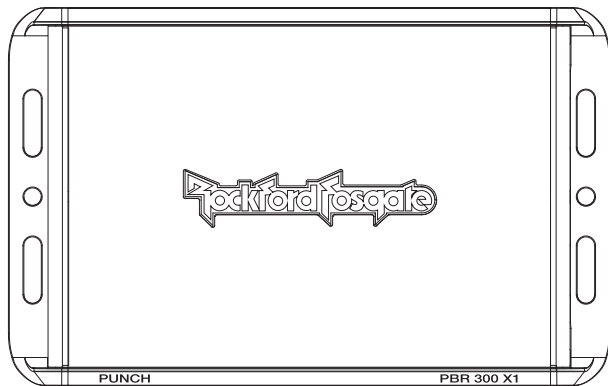

To improve the bass performance of the subwoofer when installing a STAGE 3 or STAGE 4 kit with a PBR300X1 amplifier you will need reverse the polarity of the subwoofer as described below.

Connect the Negative (-) speaker wire to the Positive (+) output wire and the Positive (+) speaker wire to the Negative (-) output wire of the amplifier connector. Internal wiring of the subwoofer in the enclosure remains the same.

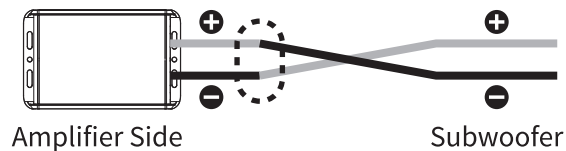

This change DOES NOT apply to STAGE 5 installations.

NOTE: Switch the wiring at the amplifier.