




**Rockford Fosgate**  
MOBILE • MARINE • MOTOSPORTS • MOTORCYCLE  
PURPOSE BUILT AUDIO™




## INSTALLATION ADVISORY

# SADDLEBAG SUBWOOFERS DISTORTED OR FAIL

TM400X4ad AMP OUTPUTS

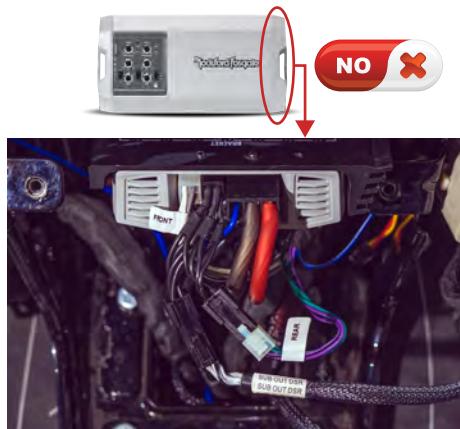

TM400X4ad AMP INPUTS

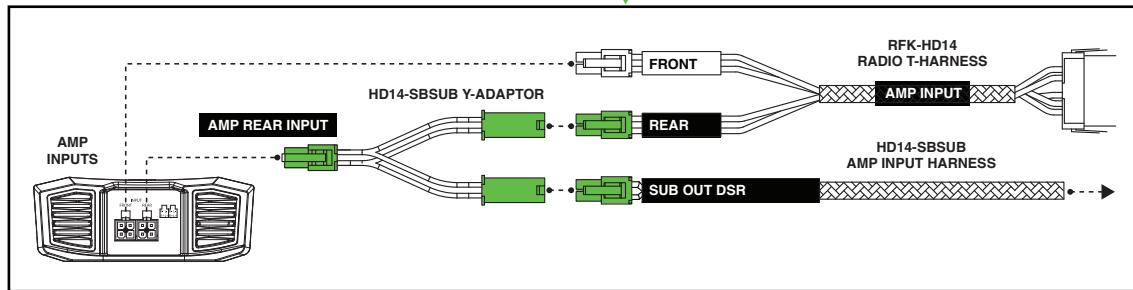

### MODELS COVERED:

- HD14-SBSUB: 2014+ Dual 10" Saddlebag Subwoofer Kit
- TM400X4ad / M5-800X4: Element Ready™ 4-Channel Amplifier
- RFK-HD14: Amplifier Installation Kit

### INSTALLATION ADVISORY:

On Harley-Davidson® aftermarket installations, connecting SUB OUT DSR to the fairing amplifier's Y-Adaptor on the OUTPUT side will cause excessive input voltage to the sub amp, causing subwoofers to fail.

### CORRECTIVE ACTION:

Carefully examine the fairing amp installation. On Road Glide®, the amp may be positioned with either the output side or the input side visible. The subwoofer input should always connect to the AMP INPUT Y-adaptor.