


**punch 160.4**  
trans • ana

**punch 240.4**  
trans • ana



## 4-channel amplifier operation & installation

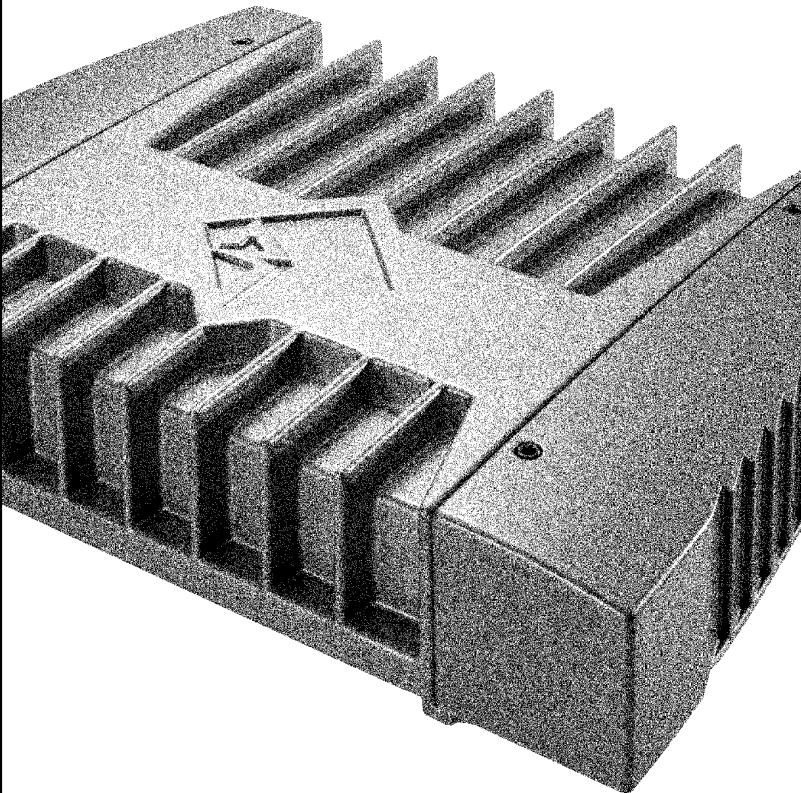



*Dear Customer,*

*Congratulations on your purchase of the world's finest brand of car audio amplifiers. At Rockford Fosgate we are committed to musical reproduction at its best, and we are pleased you chose our product. Through years of engineering expertise, hand craftsmanship and critical testing procedures, we have created a wide range of products that reproduce music with all the clarity and richness you deserve.*

*For maximum performance we recommend you have your new Rockford Fosgate product installed by an Authorized Rockford Fosgate Dealer, as we provide specialized training through Rockford Technical Training Institute (RTTI). Please read your warranty and retain your receipt and original carton for possible future use.*

*To add the finishing touch to your new Rockford Fosgate image order your Rockford accessories, which include everything from T-shirts and jackets to hats and sunglasses.*

*To get a free brochure on Rockford Fosgate products and Rockford accessories, in the U.S. call 602-967-3565 or FAX 602-967-8132. For all other countries, call +001-602-967-3565 or FAX +001-602-967-8132.*

## PRACTICE SAFE SOUND™

CONTINUOUS EXPOSURE TO SOUND PRESSURE LEVELS OVER 100dB MAY CAUSE PERMANENT HEARING LOSS. HIGH POWERED AUTO SOUND SYSTEMS MAY PRODUCE SOUND PRESSURE LEVELS WELL OVER 130dB. USE COMMON SENSE AND PRACTICE SAFE SOUND.

If, after reading your manual, you still have questions regarding this product, we recommend that you see your Rockford Fosgate dealer. If you need further assistance, you can call us direct at 1-800-795-2385. Be sure to have your serial number, model number and date of purchase available when you call.

The serial number can be found on the outside of the box. Please record it in the space provided below as your permanent record. This will serve as verification of your factory warranty and may become useful in recovering your amplifier if it is ever stolen.

Serial Number: \_\_\_\_\_

Model Number: \_\_\_\_\_

# TABLE OF CONTENTS

---

Introduction .....	1
Accessory Pack .....	1
Technical Design Features .....	2
Design Features .....	5
Installation Considerations .....	7
Mounting Location .....	8
Battery and Charging .....	9
Wiring the System .....	9
Using Passive Crossovers .....	12
Table of Crossover Component Values .....	13
Using the XCard .....	14
Resistor Chart .....	15
Using the Signal Input Switch .....	16
Installation .....	17
System Diagrams .....	24
Rockford Fosgate Accessories .....	28
Troubleshooting .....	30
Dynamic Power Measurements .....	33
160.4 Specifications .....	35
240.4 Specifications .....	36
Warranty Information .....	37
International Information .....	38

## GETTING STARTED

Welcome to Rockford Fosgate! This manual is designed to provide information for the owner, salesperson and installer. For those of you who want quick information on how to install this product, please turn to the ***Installation Section*** of this manual or refer to the icons listed below. Other information can be located by using the Table of Contents. We, at Rockford Fosgate, have worked very hard to make sure all the information in this manual is current. But, as we are constantly finding new ways to improve our product, this information is subject to change without notice.



Sections marked  
**ADVANCED OPERATION**  
include in-depth  
technical information



Sections marked  
**INSTALLATION**  
include "slam dunk"  
wiring connections



Sections marked  
**TROUBLE-SHOOTING**  
include recommendations  
for curing  
installation problems

# **INTRODUCTION**

---

The Punch 160.4 and 240.4 are 4-channel amplifiers which can deliver 160 watts and 240 watts RMS respectively. Both amplifiers utilize a 2/4-channel input switch to eliminate the need for signal splitters. A pair of internal XCard crossovers allow the amplifiers to be configured for use with many popular system designs without the added cost of external processors. The Punch 160.4 and 240.4 are powerful 4-channel amplifiers with integrated features which are offered at a competitive price.

We strongly recommend you have your Authorized Rockford Fosgate Dealer install the new Punch amplifier. If you do choose to install it yourself, please be sure to read the entire manual before beginning.

# **ACCESSORY PACK**

---

The accessory pack shipped with the Punch 4-channel amplifier includes the mounting hardware necessary to secure the amp to the vehicle as well as attach the end caps.

Installation & Operation Manual

Punch Verification Certificate

- (4) Amplifier mounting screws (#8 x 3/4" Phillips)
- (10) Speaker & power connector screws (3/32" Allen )
- (4) End cap mounting screws (9/64" Allen)
- (1) Allen Wrench 9/64"
- (1) Allen Wrench 3/32"
- (1) ATC In-line Fuseholder (160.4)
- (1) AGU In-line Fuseholder (240.4)
- (1) ATC 30 Amp Fuse (160.4)
- (1) AGU 50 Amp Fuse (240.4)

# **TECHNICAL DESIGN FEATURES**

---

## **◆ TRANS•ANA**

**(TRANSconductance Active Nodal Amplifier)**

The **TRANS•ANA** (TRANSconductance Active Nodal Amplifier) is a circuit that allows the audio signal to pass through the amplifier at low voltage. The signal is directly level-shifted to the fixed high voltage rails via a pair of driver transistors. Signal linearity is assured by an active node formed by the drive transistors at ultrasonic frequencies. This allows amplifier performance similar to *trans•nova* which is highly stable and linear while utilizing the advantages of a non-floating power supply.

**THE RESULT:** An extended frequency bandwidth accurately supplied to the output stages of the amplifier.


## **◆ TOPAZ (Tracking Operation Pre-Amplifier Zone)**

The **TOPAZ** (Tracking Operation Pre-Amplifier Zone) circuitry solves ground loop noise problems common to automotive amplifier design. This innovative new development allows vastly improved isolation of the input signal grounds from the power supply ground of the amplifier. This is accomplished by allowing the source unit to control the potential "environment" of the entire input structure or "zone" of the amplifier. This process improves the noise rejection of the amplifier by 30-40dB – an astounding 30-100 times better than amplifiers without TOPAZ.

**THE RESULT:** Elimination of troublesome ground loop noise between source and amplifier.

## ◆ DSM (Discrete Surface Mount) Technology

The **DSM** (Discrete Surface Mount) manufacturing process combines the advantages of both discrete components and integrated circuitry. Rockford Fosgate is the only American amplifier manufacturer to have invested millions into this process. DSM components differ from conventional discrete components in three ways. They are more compact, more rugged, and they efficiently dissipate generated heat. Using them wherever appropriate allows the advantages associated with discrete circuitry to be retained while also providing room for both highly advanced processing features and generous PC board copper paths where needed. Their short lead-out structures allow maximum audio performance and highest signal-to-noise ratios to be obtained in amplifiers of desirable package size without resorting to "amplifier-on-a-chip" shortcuts. These advantages are shown in Figure 1.

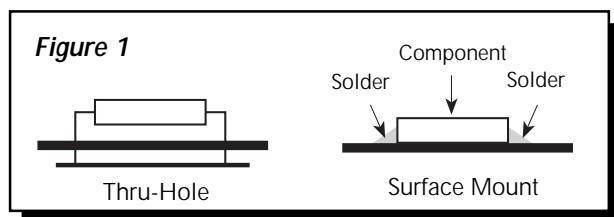

**THE RESULT:** Fewer connections, improved reliability, shorter signal paths, superior signal-to-noise ratio and awesome sonic performance.

## ◆ XCard (Internal Crossover)

The Punch amplifiers utilize internal active crossovers. These crossovers have many performance advantages such as using discrete components for exact frequency adjustments which are far superior to potentiometers. Additionally, the XCard can be configured for high-pass, low-pass and full range operation. With slight modifications, many crossover frequencies and slope configurations can be achieved.

**THE RESULT:** Increased system design flexibility with a precise electronic crossover without the limitations of conventional potentiometer designs.

## ◆ NOMAD (NOn-Multiplying Advanced Decision)

The Punch amplifiers use an *analog computer process* to maximize safe output power under all operating conditions. Rockford Fosgate pioneered and developed **RTP** (Real Time Protection), a crucial element in the performance edge of our amplifiers. The innovative **NOMAD (NOn-Multiplying Advanced Decision)** system is the most sophisticated version of this technique ever used, bringing previously unavailable levels of accuracy, stability, temperature immunity and reliability to this critical process. NOMAD makes advanced decisions based on device voltages to precisely control the awesome levels of current available in the output MOSFETs to safe values – but only when absolutely needed.

**THE RESULT:** Extremely fast protection system that always protects the amplifier and never degrades the sound.


## ◆ MOSFET Devices

Rockford Fosgate is one of the few manufacturers in the sound community to utilize MOSFET devices in both the **power supply** and the **output stages**. **MOSFET** (Metal Oxide Semiconductor Field Effect Transistor) devices offer several important inherent advantages over the 30 year old technology of bi-polar design. These advantages include: thermal stability, switching speed, ultra low output impedance and wider bandwidth linearity. In addition, MOSFETs operate very similar to vacuum tubes in which they are more linear than bipolar transistors. However, MOSFETs can deliver the midrange clarity without the limitations of transient response and high frequency phase shifting normally associated with tube operation.

**THE RESULT:** Operational characteristics similar to vacuum tubes without the performance limitations of tube designs.


# DESIGN FEATURES

- Cast Aluminum Heatsink** – The cast aluminum heatsink of the Punch amplifier dissipates heat generated by the amplifier's circuitry. The inherent advantage of casting provides a 30% improvement of cooling over conventional extrusion heatsink designs.
- End Caps** – The unique end caps conceal the wiring and input cables, giving the amplifier a clean "stealth" look.

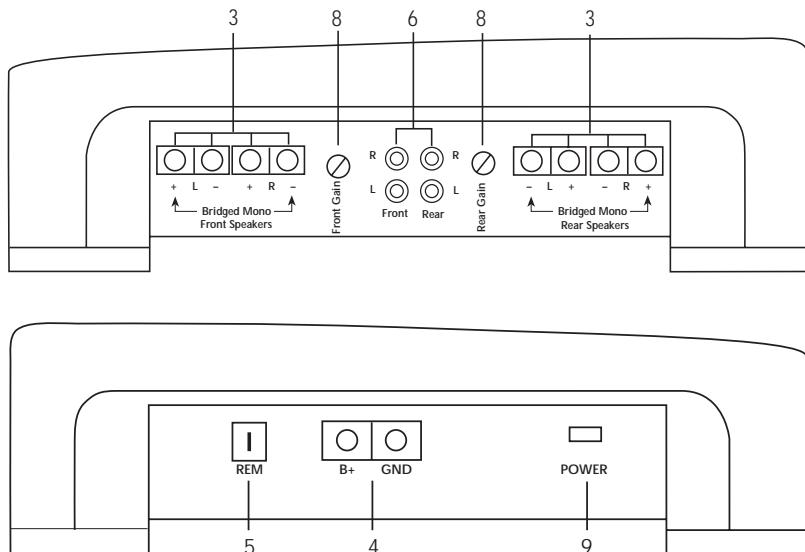

- Speaker Terminals** – The heavy duty, gold-plated terminal block connectors (+ and -) will accept wire sizes from 8 AWG to 18 AWG. These gold-plated connectors are immune to corrosion that can cause signal deterioration.
- Power Terminals** – The power and ground connectors on the Punch amplifier are gold-plated and will accommodate up to 8 AWG wire maximizing the input current capability of the amplifier.
- REM Terminal** – This gold spade terminal is used for the auto power/remote turn-on of the Punch amplifier.

6. **RCA Input Jacks** – The industry standard RCA jacks provide easy connections for signal level input. They are gold-plated to resist the signal degradation caused by corrosion.
7. **Signal Input Switch** – This switch allows selection of 2-channel or 4-channel source unit feed.
8. **Input Sensitivity Controls** – The input level controls are preset to match the output of most source units. They can be adjusted to match output levels from a variety of source units.
9. **LED Power Indicator** – The LED illuminates when the unit is turned on.
10. **XCard (Internal Crossover)** – These built-in crossover cards are configurable for a multitude of operating frequencies. The orientation of the card in its socket determines the function of high-pass, low-pass, or full range operation.

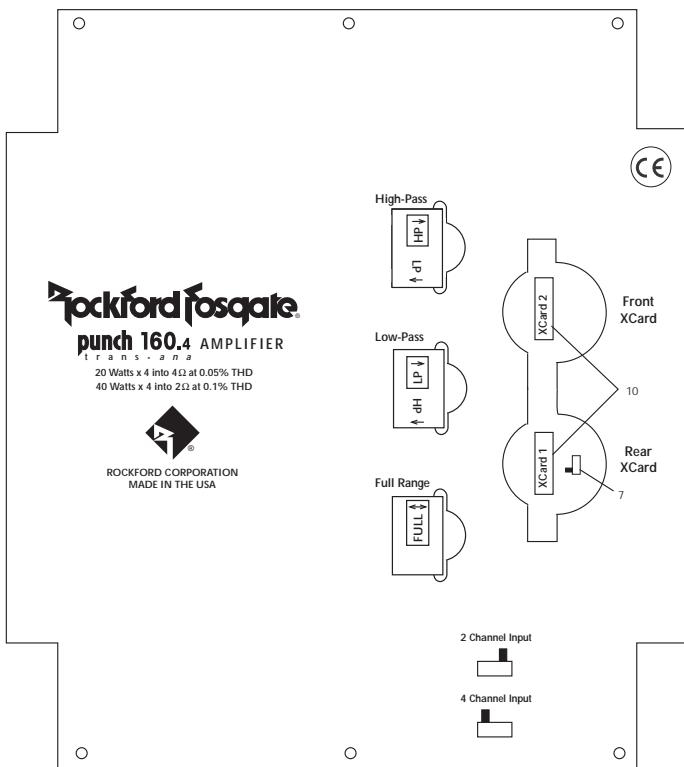

# **INSTALLATION CONSIDERATIONS**

---

The following is a list of tools you will need for installing the Punch amplifier:

Allen wrenches 9/64" & 3/32" (included)	Voltmeter
Wire strippers	Battery post wrench
Electric hand drill w/assorted bits	Wire cutters
Wire crimpers	Assorted connectors

This section focuses on some of the vehicle considerations for installing your new Punch amplifier. Checking your battery and present sound system, as well as pre-planning your system layout and best wiring routes will save installation time. When deciding how to lay out your new system, be sure that each component will be easily accessible for making adjustments.

Before beginning any installation, be sure to follow these simple rules:

1. Be sure to carefully read and understand the instructions before attempting to install the amplifier.
2. **For safety**, disconnect the negative lead from the battery prior to beginning the installation.
3. For easier assembly, we suggest you run all wires prior to mounting your amplifier in place.
4. Route all of the RCA cables close together and away from any high current wires.
5. Use high quality connectors for a reliable installation and to minimize signal or power loss.
6. **Think before you drill!** Be careful not to cut or drill into gas tanks, fuel lines, brake or hydraulic lines, vacuum lines or electrical wiring when working on any vehicle.
7. Never run wires underneath the vehicle. Running the wires inside the vehicle provides the best protection.
8. Avoid running wires over or through sharp edges. Use rubber or plastic grommets to protect any wires routed through metal, especially the firewall.
9. **ALWAYS** protect the battery and electrical system from damage with proper fusing. Install the appropriate fuseholder and fuse on the +12V power wire within 18" (45.7 cm) of the battery terminal.
10. When grounding to the chassis of the vehicle, scrape all paint from the metal to ensure a good, clean ground connection. Grounding connections should be as short as possible and always be connected to metal that is welded to the main body, or chassis, of the vehicle.

# **MOUNTING LOCATION**

---

The mounting location and position of your amplifier will have a great effect on its ability to dissipate the heat generated during normal operation. The design of our cast aluminum heatsink serves to easily dissipate the heat generated over a wide range of operating conditions. However, to maximize the performance of your amplifier, care should be taken to ensure adequate ventilation.

## **Trunk Mounting**

Mounting the amplifier vertically on a surface with the fin grooves running up and down will provide the best cooling of the amplifier.

Mounting the amplifier on the floor of the trunk will work but provides less cooling capability than vertical mounting.

Mounting the amplifier upside down to the rear deck of the trunk will not provide proper cooling and will severely affect the performance of the amplifier and is **not** recommended.

## **Passenger Compartment Mounting**

Mounting the amplifier in the passenger compartment will work as long as you provide a sufficient amount of air for the amplifier to cool itself. If you are going to mount the amplifier under the seat of the vehicle, you must have at least 1" (2.54cm) of air gap around the amplifier's heatsink.

Mounting the amplifier with less than 1" (2.54cm) of air gap around the amplifier's heatsink in the passenger compartment will not provide proper cooling and will severely affect the performance of the amplifier and is **not** recommended.

## **Engine Compartment Mounting**

Rockford Fosgate amplifiers should **never** be mounted in the engine compartment. Not only will this void your warranty but could create an embarrassing situation caused by the ridicule from your friends.

## BATTERY AND CHARGING

---

Amplifiers will put an increased load on the vehicle's battery and charging system. We recommend checking your alternator and battery condition to ensure that the electrical system has enough capacity to handle the increased load of your stereo system. Stock electrical systems which are in good condition should be able to handle the extra load of any Rockford amplifier without problems, although battery and alternator life can be reduced slightly. To maximize the performance of your Rockford Fosgate amplifier, we suggest the use of a heavy duty battery and an energy storage capacitor.

## WIRING THE SYSTEM

---

**CAUTION:** Avoid running power wires near the low level input cables, antenna, power leads, sensitive equipment or harnesses. The power wires carry substantial current and could induce noise into the audio system.

- **For safety,** disconnect the negative lead from the battery prior to beginning the installation.

Configure the internal XCard crossovers prior to installation. (Refer to page 14 for more information.)

1. Plan the wire routing. Take care when running signal level RCA cables to keep them close together but isolated from the amplifier's power cables and any high power auto accessories, especially electric motors. This is done to prevent coupling the noise from radiated electrical fields into the audio signal. When feeding the wires through the firewall or any metal barrier, protect them with plastic or rubber grommets to prevent short circuits. Leave the wires long at this point to adjust for a precise fit at a later time.
2. Prepare the B+ cable for attachment to the amplifier by stripping 5/8" of insulation from the end of the wire. The use of 8 gauge power cable can interfere with the installation of the end caps. Proper wire dress can prevent this from occurring. To prevent the wire from fraying, strip the insulation at a 45° angle. Insert the bared wire into the B+ terminal with the long side of the insulation on the top. Bend the cable down at a 90° angle. Tighten the set screw to secure the cable in place.

### **3. Punch 160.4**

Trim the power cable to within 18" of the battery and install the protective rubber boot packed with the fuseholder over the end of the wire. Strip 3/8" of insulation from the wire and insert it into the end of the fuseholder, then crimp it in place. Slide the rubber boot into place to cover the connection. Use the section of cable trimmed earlier and connect it to the other end of the fuseholder.

### **Punch 240.4**

Mount the fuseholder within 18" of the battery using two (2) #8 screws. Disassemble the fuseholder. You should have 2 black plastic end caps, 2 gold-plated fuse clips, a plastic spacer and the fuseholder body. Trim the amplifier power cable to reach the fuseholder and strip the wire 3/8". Slide one of the end caps over the wire (narrow end first) and insert the wire into one of the fuse clips. Tighten the set screw. Screw the black end cap to the fuseholder body to secure the cable. Use the section of cable that was trimmed earlier and connect it to the other end of the fuseholder. Install the plastic spacer in the fuseholder and attach the cable to the fuseholder body.

**NOTE:** The B+ cable MUST be fused 18" or less from the vehicle's battery. Install the fuseholder under the hood and prepare the cable ends as stated above. Connections should be water tight.

4. Strip 3/8" from the battery end of the power cable and crimp the large ring terminal to the cable. Use the ring terminal to connect to the battery positive terminal. **Do not install the fuse at this time.**
5. Prepare a length of cable to be used for the **GND** connection. Strip 5/8" of insulation from the end of the cable as described previously and connect to the appropriate terminal of the amplifier. Prepare the chassis ground by scraping any paint from the metal surface and thoroughly clean the area of all dirt and grease. Strip the other end of the wire and attach a ring connector. Fasten the cable to the chassis using a screw.

6. Prepare the **REM** turn-on wire for connection to the amplifier by stripping 1/4" of insulation from the wire end and crimping an insulated spade connector in place. Slide the connector over the REM terminal on the amplifier. Connect the other end of the REM wire to a switched 12 volt positive source. The switched signal is usually taken from the source unit's auto antenna or the accessory lead. If the source unit does not have these outputs available, the recommended solution is to wire a mechanical switch in line with a 12 volt source to activate the amplifier.
7. Connect the source signal to the amplifier by plugging the RCA cables into the input jacks at the amplifier.
8. Connect the speakers. Strip the speaker wires 5/8". Insert the bared wire into the speaker terminal and tighten the set screw to secure into place. Be sure to maintain proper speaker polarity. ***DO NOT chassis ground any of the speaker leads as unstable operation may result.***
9. Perform a final check of the completed system wiring to ensure that all connections are accurate. Check all power and ground connections for frayed wires and loose connections which could cause problems.
10. After the final inspection is complete, install the power fuse and enjoy listening. During the initial listening period, you may need to "fine tune" any phasing and level settings within your particular vehicle. To aid in this procedure, play a track with high musical content and cruise around your neighborhood. After fully evaluating the transient response of your system and making any final adjustments, all your neighbors within a 1 mile radius will assume that you have just successfully completed another upgrade to your audio system for which they will probably spill thumbtacks on your driveway.

# USING PASSIVE CROSSOVERS




A passive crossover is a circuit that uses capacitors and/or coils and is placed on speaker leads between the amplifier and speaker. The crossover delegates a specific range of frequencies to the speaker for optimum driver performance. A crossover network can perform one of three functions: High-Pass (capacitors), Low-Pass (inductors or coils) and Bandpass (combination of capacitor and coil).

The most commonly used passive crossover networks are 6dB/octave systems. These are easy to construct and require one component per filter. Placing this filter in series with the circuit will reduce power to the speaker by 6dB/octave above or below the crossover point depending on whether it is a high-pass or low-pass filter. More complex systems such as 12dB/octave or 18dB/octave can cause impedance problems if not professionally designed.


Passive crossovers are directly dependent upon the speaker's impedance and component value for accuracy. When passive crossover components are used in multiple speaker systems, the crossover's effect on the overall impedance should be taken into consideration along with the speaker's impedance when determining amplifier loads. ***CAUTION: The Rockford Fosgate amplifiers are not recommended for impedance loads below 2Ω stereo and 4Ω bridged (mono) loads.***



# TABLE OF CROSSOVER COMPONENT VALUES

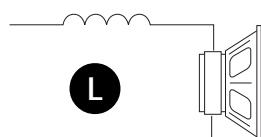

6 dB/Octave Low-Pass

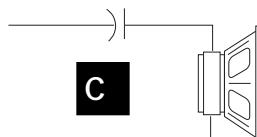

6 dB/Octave High-Pass

Freq. Hertz	Speaker Impedance					
	2 OHMS		4 OHMS		8 OHMS	
	L	C	L	C	L	C
80	4.1mH	1000µF	8.2mH	500µF	16mH	250µF
100	3.1mH	800µF	6.2mH	400µF	12mH	200µF
130	2.4mH	600µF	4.7mH	300µF	10mH	150µF
200	1.6mH	400µF	3.3mH	200µF	6.8mH	100µF
260	1.2mH	300µF	2.4mH	150µF	4.7mH	75µF
400	.8mH	200µF	1.6mH	100µF	3.3mH	50µF
600	.5mH	136µF	1.0mH	68µF	2.0mH	33µF
800	.41mH	100µF	.82mH	50µF	1.6mH	26µF
1000	.31mH	78µF	.62mH	39µF	1.2mH	20µF
1200	.25mH	66µF	.51mH	33µF	1.0mH	16µF
1800	.16mH	44µF	.33mH	22µF	.68mH	10µF
4000	.08mH	20µF	.16mH	10µF	.33mH	5µF
6000	51µH	14µF	.10mH	6.8µF	.20mH	3.3µF
9000	34µH	9.5µF	.68µH	4.7µF	.15mH	2.2µF
12000	25µH	6.6µF	.51µH	3.3µF	100µH	1.6µF

6 dB/Octave High-Pass and Low-Pass Filters


L = Low-Pass (Inductor)

C = High-Pass (Capacitor)

For more information, see your Authorized Rockford Fosgate Dealer.

# USING THE XCARD

The crossover functions are controlled through the use of an XCard and can be set for high-pass, low-pass or full range operation. Each crossover card has two faces: one face operates **Full Range**, the other has arrows to indicate the edge for selecting **HP** (high-pass) or **LP** (low-pass) operation. Orient the card with the desired operating edge, indicated by the arrow, toward the socket terminals inside the amplifier. Firmly, but carefully, plug the card into the socket.

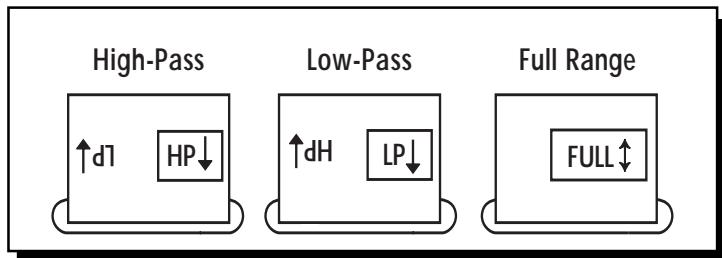

The crossover point can be altered by changing the 4 resistor values. Use the following formula to select the appropriate resistor value to be placed on the XCard.




$$\frac{3386}{f_0} = R \text{ (in k}\Omega\text{)} \text{ for } .047\mu\text{f cap}$$

The actual formula is:

$$\frac{7234}{f_0} = R \text{ (in k}\Omega\text{)} \text{ for } .022\mu\text{f cap}$$

$$R = \frac{1}{2\pi f_0 C}$$

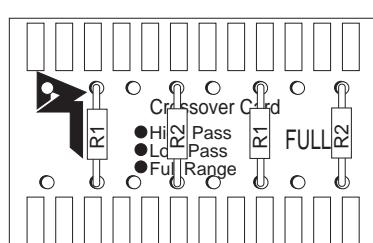

Where:  $R$  = ohms

$f_0$  = desired crossover frequency

$C$  = capacitor in farads

ex:  $.047 \times 10^{-6}$  for  $.047\mu\text{f}$  cap

# RESISTOR CHART



Our tests have shown that using 0.047 $\mu$ F capacitors for frequencies below 100Hz, and 0.022 $\mu$ F capacitors for frequencies above 100Hz, result in more linear crossover control. Refer to the Specifications page to determine the capacitor value of each supplied XCard.

## Butterworth Alignment Q = .707 1% resistors used with 0.047 $\mu$ F caps


Frequency	R1	R2
20Hz	169k $\Omega$	169k $\Omega$
25Hz	133k $\Omega$	133k $\Omega$
30Hz	110k $\Omega$	110k $\Omega$
35Hz	95.3k $\Omega$	95.3k $\Omega$
40Hz	84.5k $\Omega$	84.5k $\Omega$
45Hz	75k $\Omega$	75k $\Omega$
50Hz	68.1k $\Omega$	68.1k $\Omega$
55Hz	61.9k $\Omega$	61.9k $\Omega$
60Hz	56.2k $\Omega$	56.2k $\Omega$
65Hz	52.3k $\Omega$	52.3k $\Omega$
70Hz	48.7k $\Omega$	48.7k $\Omega$
75Hz	45.3k $\Omega$	45.3k $\Omega$
80Hz	42.2k $\Omega$	42.2k $\Omega$
85Hz	40.2k $\Omega$	40.2k $\Omega$
90Hz	37.4k $\Omega$	37.4k $\Omega$
200Hz	16.9k $\Omega$	16.9k $\Omega$
300Hz	11.3k $\Omega$	11.3k $\Omega$
400Hz	8.45k $\Omega$	8.45k $\Omega$
500Hz	6.65k $\Omega$	6.65k $\Omega$
600Hz	5.62k $\Omega$	5.62k $\Omega$
700Hz	4.75k $\Omega$	4.75k $\Omega$
800Hz	4.22k $\Omega$	4.22k $\Omega$
900Hz	3.74k $\Omega$	3.74k $\Omega$
1kHz	3.40k $\Omega$	3.40k $\Omega$
1.2kHz	2.80k $\Omega$	2.80k $\Omega$
2kHz	1.69k $\Omega$	1.69k $\Omega$
3kHz	1.10k $\Omega$	1.10k $\Omega$
4kHz	845 $\Omega$	845 $\Omega$
5kHz	665 $\Omega$	665 $\Omega$
6kHz	562 $\Omega$	562 $\Omega$
7kHz	487 $\Omega$	487 $\Omega$
8kHz	422 $\Omega$	422 $\Omega$

## Butterworth Alignment Q = .707 1% resistors used with 0.022 $\mu$ F caps

Frequency	R1	R2
20Hz	357k $\Omega$	357k $\Omega$
25Hz	287k $\Omega$	287k $\Omega$
30Hz	237k $\Omega$	237k $\Omega$
35Hz	205k $\Omega$	205k $\Omega$
40Hz	178k $\Omega$	178k $\Omega$
45Hz	162k $\Omega$	162k $\Omega$
50Hz	143k $\Omega$	143k $\Omega$
55Hz	130k $\Omega$	130k $\Omega$
60Hz	121k $\Omega$	121k $\Omega$
65Hz	110k $\Omega$	110k $\Omega$
70Hz	102k $\Omega$	102k $\Omega$
75Hz	95.3k $\Omega$	95.3k $\Omega$
80Hz	90.9k $\Omega$	90.9k $\Omega$
85Hz	84.5k $\Omega$	84.5k $\Omega$
90Hz	80.6k $\Omega$	80.6k $\Omega$
200Hz	35.7k $\Omega$	35.7k $\Omega$
300Hz	23.7k $\Omega$	23.7k $\Omega$
400Hz	17.8k $\Omega$	17.8k $\Omega$
500Hz	14.3k $\Omega$	14.3k $\Omega$
600Hz	12.1k $\Omega$	12.1k $\Omega$
700Hz	10.2k $\Omega$	10.2k $\Omega$
800Hz	9.9k $\Omega$	9.9k $\Omega$
900Hz	8.6k $\Omega$	8.6k $\Omega$
1.0kHz	7.15k $\Omega$	7.15k $\Omega$
1.2kHz	6.04k $\Omega$	6.04k $\Omega$
2.0kHz	3.57k $\Omega$	3.57k $\Omega$
3.0kHz	2.37k $\Omega$	2.37k $\Omega$
4.0kHz	1.76k $\Omega$	1.76k $\Omega$
5.0kHz	1.43k $\Omega$	1.43k $\Omega$
6.0kHz	1.21k $\Omega$	1.21k $\Omega$
7.0kHz	1.02k $\Omega$	1.02k $\Omega$
8.0kHz	909 $\Omega$	909 $\Omega$


# USING THE SIGNAL INPUT SWITCH

## 2-Channel Input

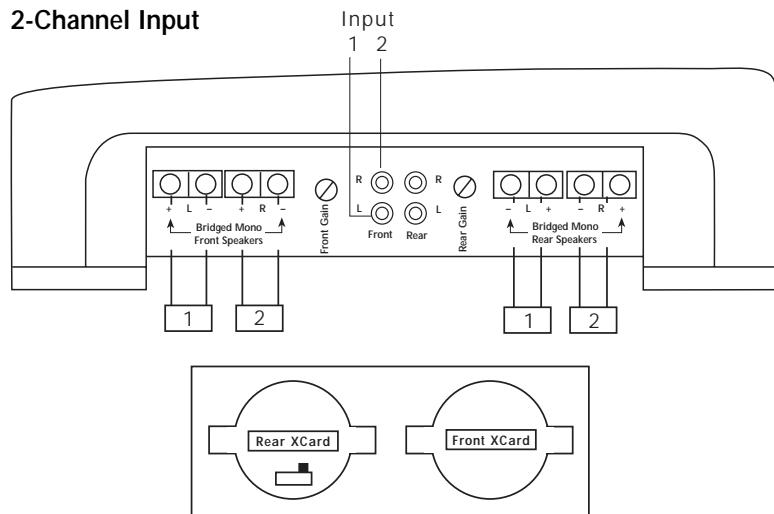

- RCAs connected to Front inputs
- Signal Input Switch set to 2-channel input
- This configuration eliminates the need for signal splitters

## 4-Channel Input

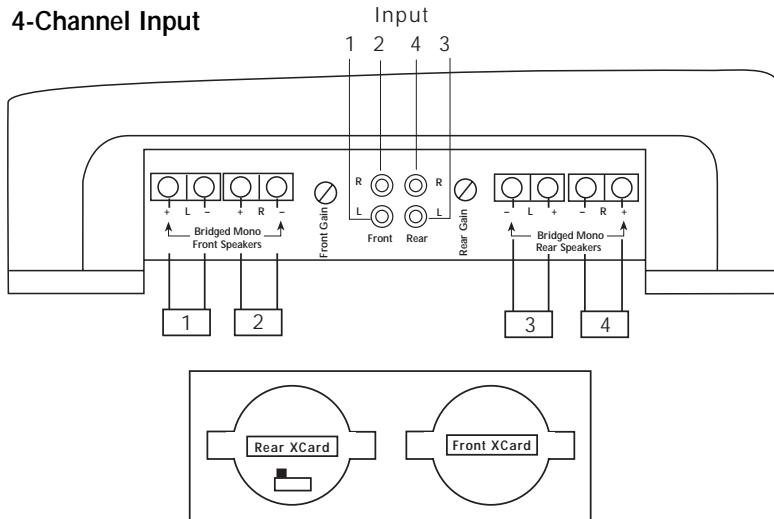


- RCAs connected to Front & Rear inputs
- Signal Input Switch set to 4-channel input
- This configuration allows for Front & Rear fading

# INSTALLATION





## Power Connections

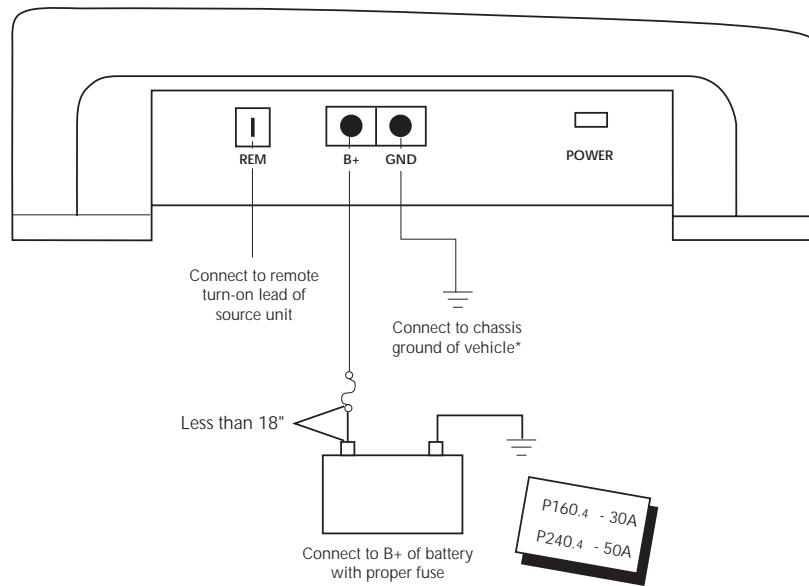


\*Keep grounds as short as possible.

## Stereo Operation

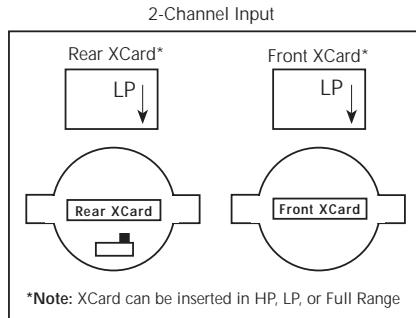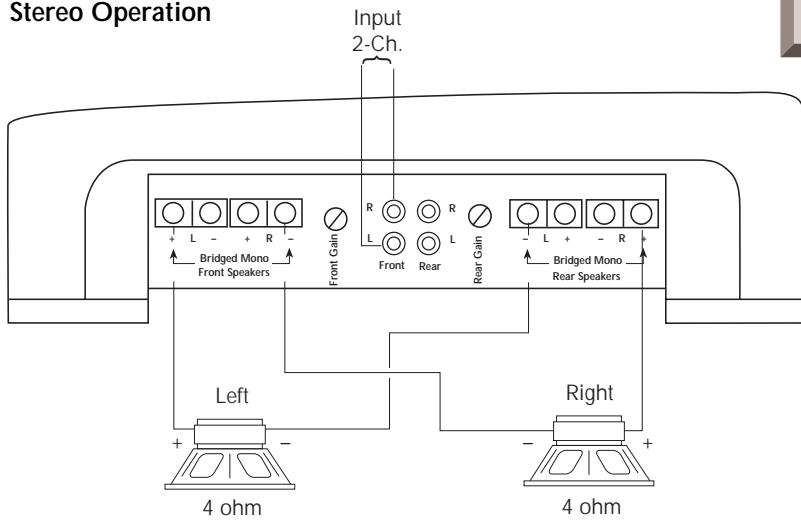


- RCAs are connected to front inputs
- **Signal Input Switch** set to 2-channel input
- **Gain** for front and rear must be set equally to balance left and right channels
- **Impedance** for left bridged channel should be no less than  $4\Omega$
- **Impedance** for right bridged channel should be no less than  $4\Omega$
- **XCards** for front and rear are set identically as High-Pass, Low-Pass or Full Range

## Mono Operation

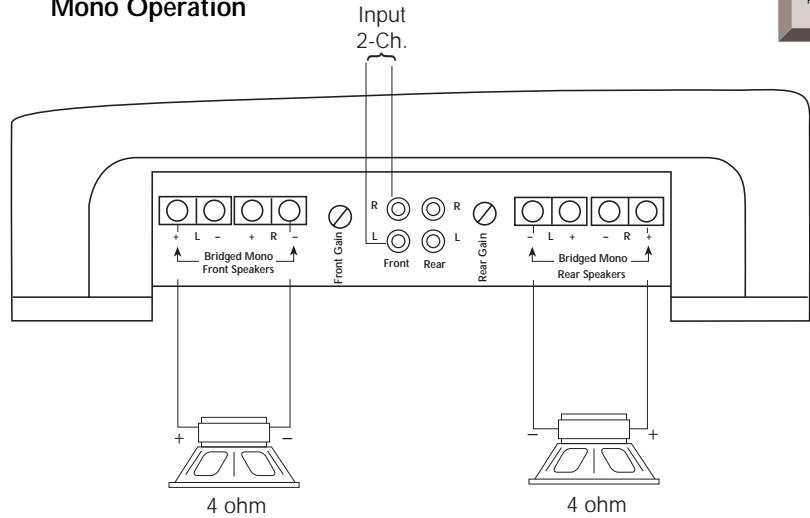


2-Channel Input

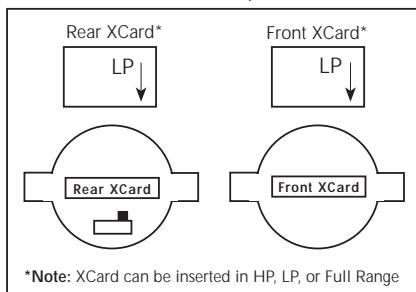


- **RCAs** are connected to front inputs
- **Signal Input Switch** set to 2-channel input
- **Gain** for front and rear operates independently
- **Impedance** for front bridged channel should be no less than  $4\Omega$
- **Impedance** for rear bridged channel should be no less than  $4\Omega$
- **Front XCard** can be set for High-Pass, Low-Pass or Full Range
- **Rear XCard** can be set for High-Pass, Low-Pass or Full Range

### 3-Channel Operation

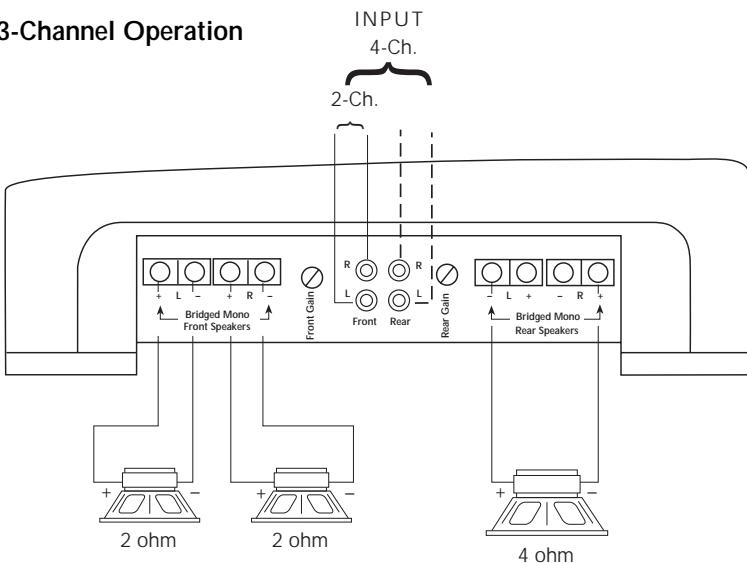


2-Channel Input

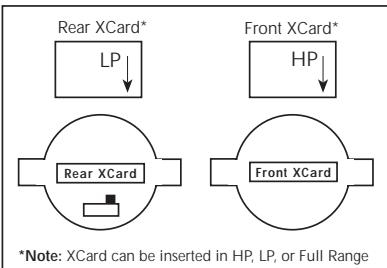

\*Note: XCard can be inserted in HP, LP, or Full Range

4-Channel Input

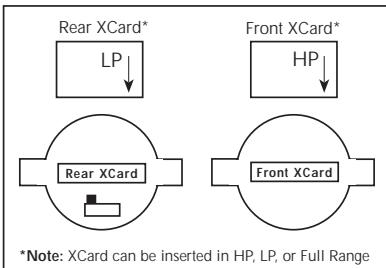


\*Note: XCard can be inserted in HP, LP, or Full Range


- RCAs are connected to front or front and rear inputs
- **Signal Input Switch** is set to 2-channel or 4-channel input
- **Gain** for front and rear operates independently
- **Impedance** for front stereo channels should be no less than  $2\Omega$
- **Impedance** for rear bridged channel should be no less than  $4\Omega$
- **Front XCard** can be set for High-Pass, Low-Pass or Full Range
- **Rear XCard** can be set for High-Pass, Low-Pass or Full Range

**Note:** Invert the speaker wire polarity (+ and -) on the rear channels if XCard for front channel is set to HP and XCard for rear channel is set to LP (or vice versa).


## 4-Channel Stereo Operation

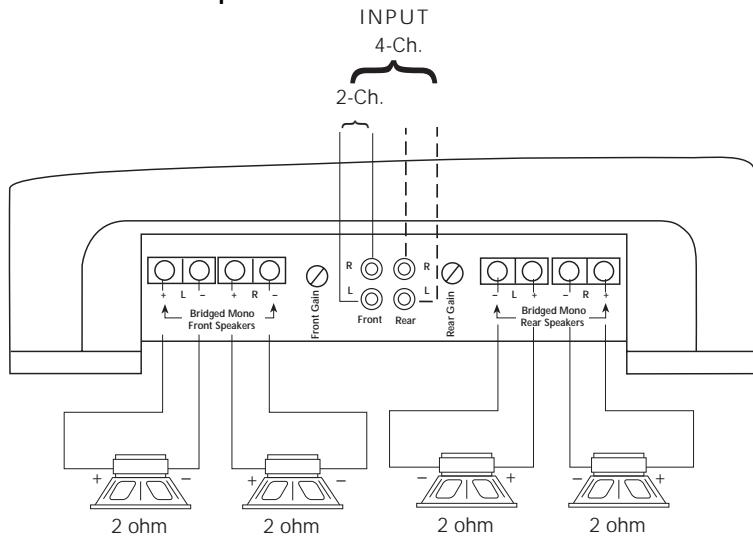

2-Channel Input

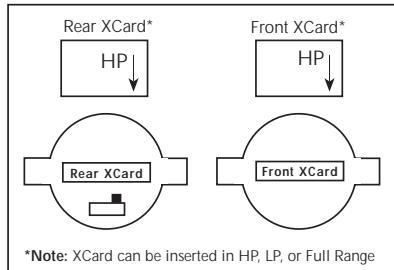


4-Channel Input

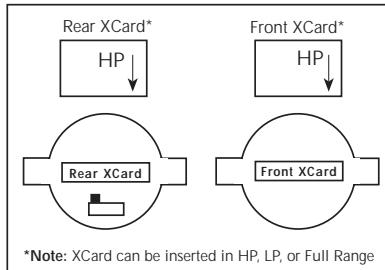


- RCAs are connected to front or front and rear inputs
- **Signal Input Switch** is set to 2-channel or 4-channel input
- **Gain** for front and rear operates independently
- **Impedance** for each stereo channel should be no less than  $2\Omega$
- **Front XCard** can be set for High-Pass, Low-Pass or Full Range
- **Rear XCard** can be set for High-Pass, Low-Pass or Full Range

**Note:** Invert the speaker wire polarity (+ and -) on the rear channels if XCard for front channel is set to HP and XCard for rear channel is set to LP (or vice versa).

## 4-Channel Stereo/Single Bridged Operation

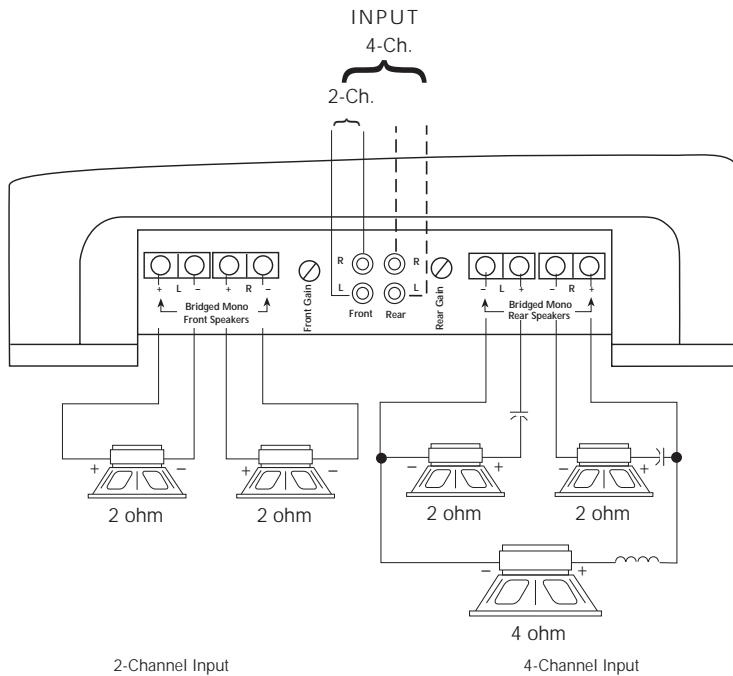


2-Channel Input

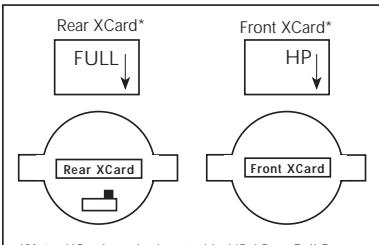

\*Note: XCard can be inserted in HP, LP, or Full Range


4-Channel Input

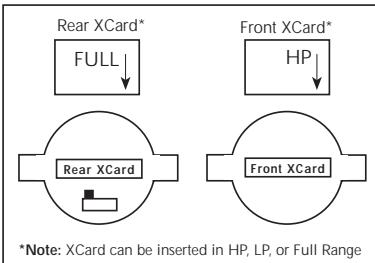


\*Note: XCard can be inserted in HP, LP, or Full Range

- RCAs are connected to front or rear inputs
- **Signal Input Switch** is set to 2-channel or 4-channel input
- **Gain** for front and rear operates independently
- **Impedance** for front and rear stereo channel should be no less than  $2\Omega$
- **Impedance** for rear bridged channel should be no less than  $4\Omega$
- **Front XCard** is set for High-Pass, Low-Pass or Full Range
- **Rear XCard** is set to Full Range
- **Passive crossovers** are needed for proper stereo/mono operation

## 4-Channel Stereo/Dual Bridged Operation

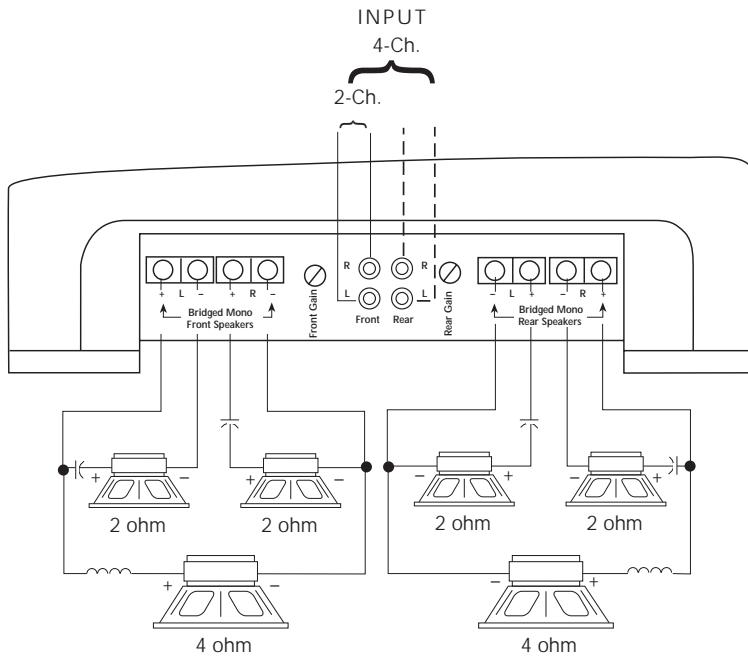


2-Channel Input

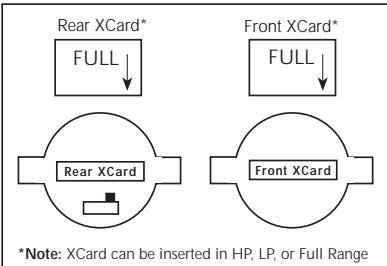

\*Note: XCard can be inserted in HP, LP, or Full Range

4-Channel Input

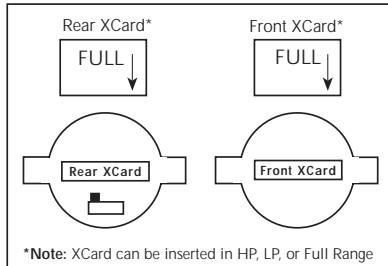


\*Note: XCard can be inserted in HP, LP, or Full Range


- RCAs are connected to front or front and rear inputs
- **Signal Input Switch** is set to 2-channel or 4-channel input
- Gain for front and rear operates independently
- **Impedance** for front and rear stereo channels should be no less than  $2\Omega$
- **Impedance** for front and rear bridged channels should be no less than  $4\Omega$
- **Front XCard** is set to Full Range
- **Rear XCard** is set to Full Range
- **Passive crossovers** are needed for proper stereo/mono operation

# SYSTEM DIAGRAMS


## 80 Watt 3-Way System

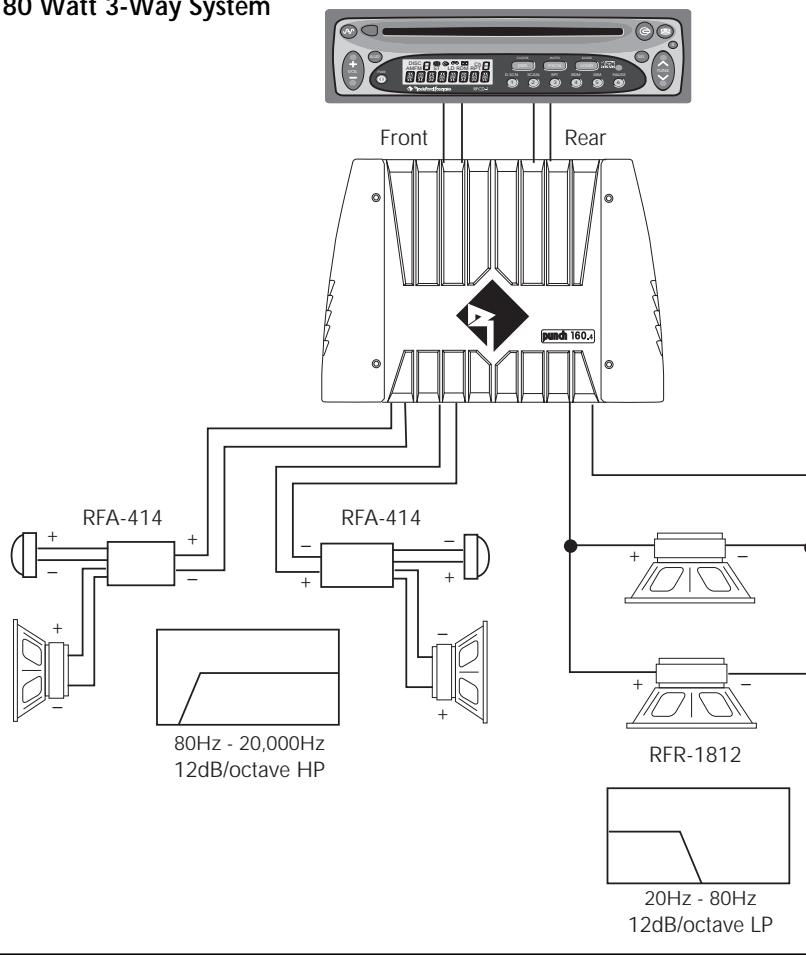


## 80 Watt 4-Way System

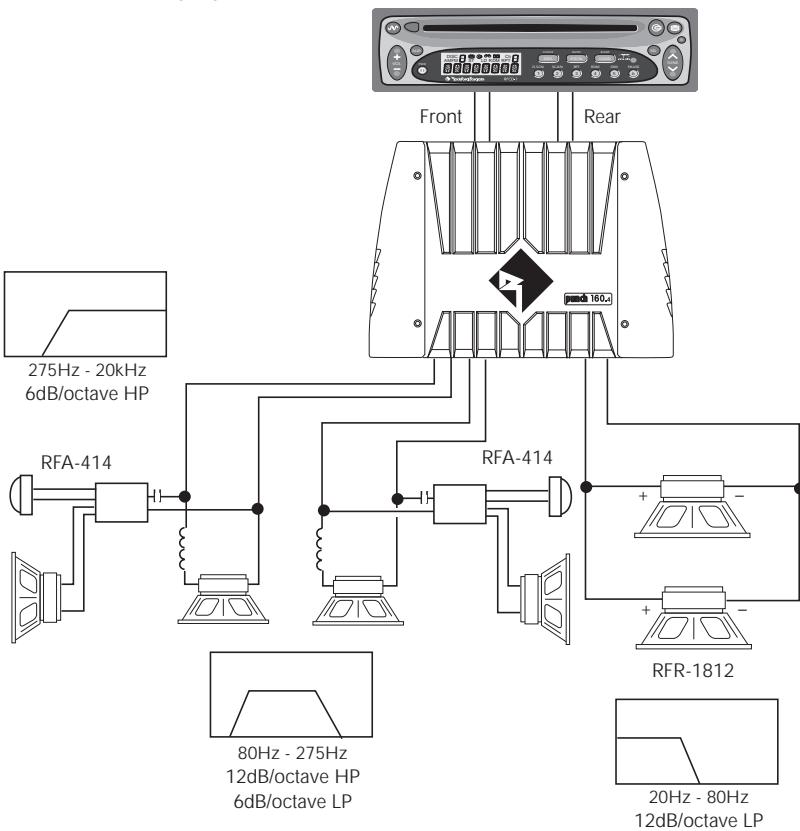

## 200 Watt 4-Way System

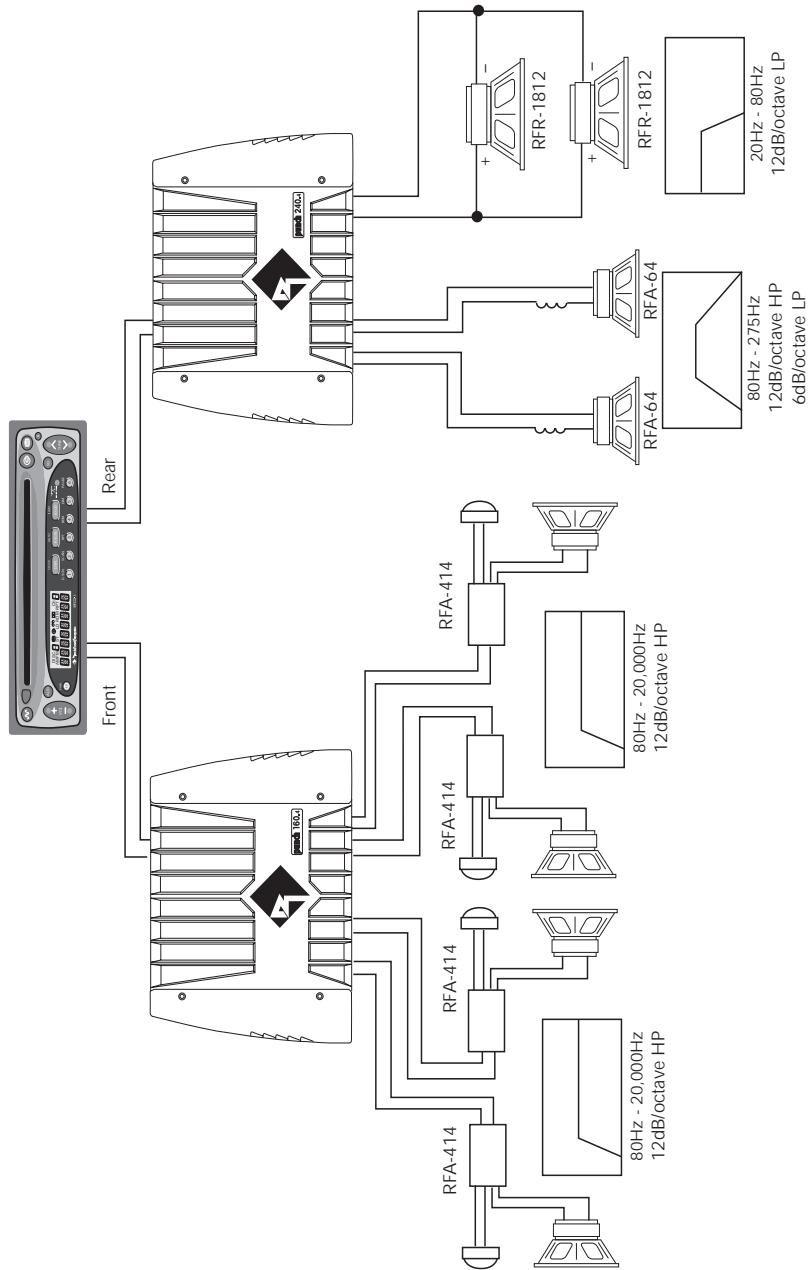

## 450 Watt 4-Way System

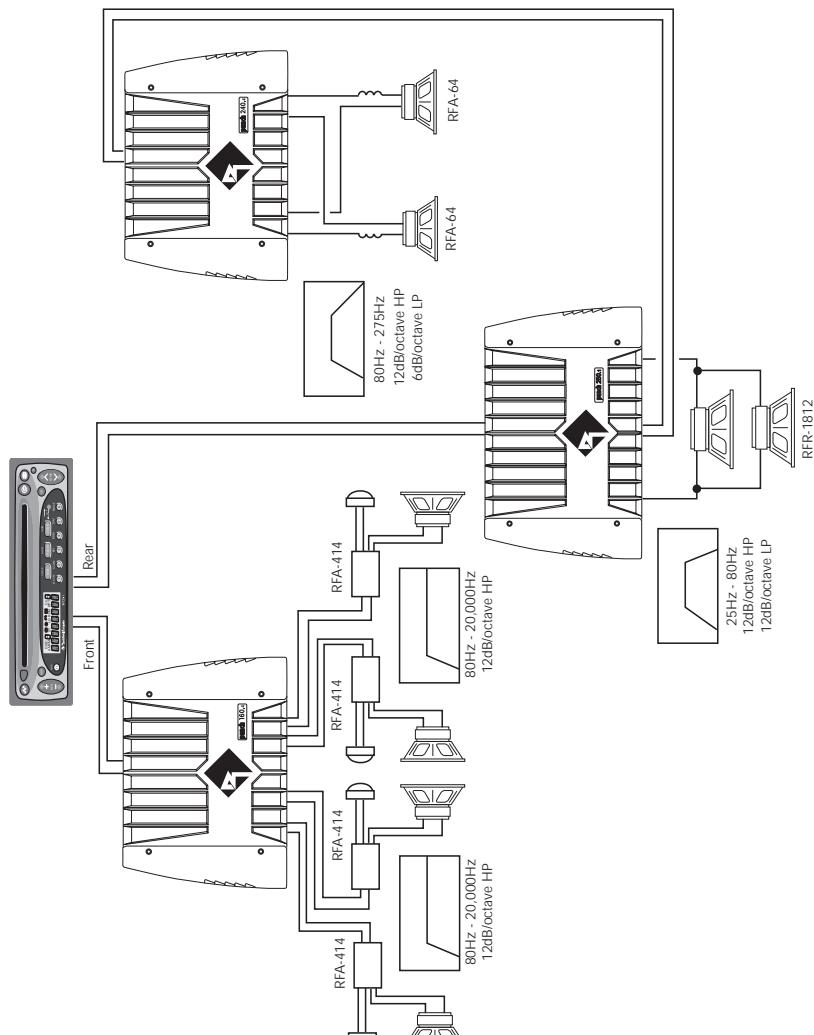


# **ROCKFORD FOSGATE ACCESSORIES**



## **Energy Storage Capacitors**

Energy storage capacitors are used to provide extra current needed by amplifiers to reproduce musical transients. The capacitors also have the natural ability to filter AC ripple caused by the alternator, reducing the chance of noise in the system. The Punch Caps are available in a variety of values and will maximize both the sound quality and performance that Rockford Fosgate amplifiers can deliver.

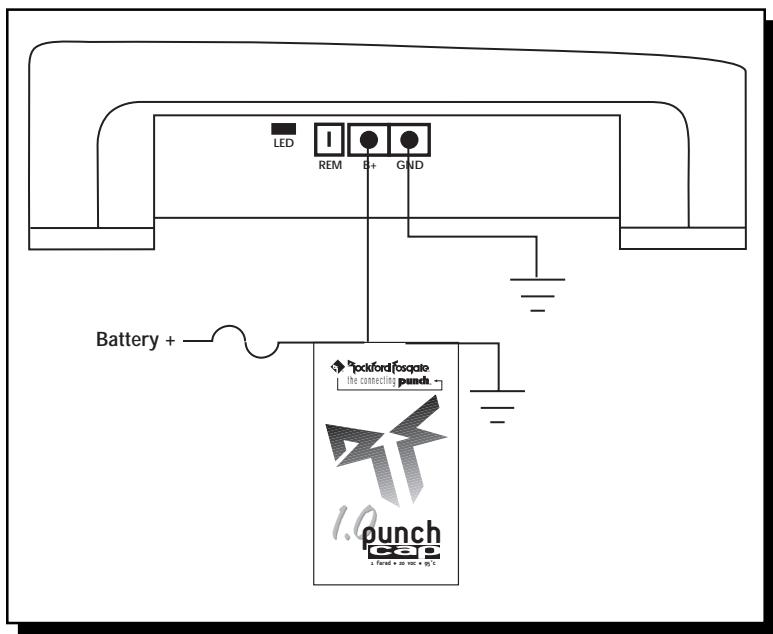

- Recommended capacitance is 1 farad per 1000 watts


***ATTENTION: We recommend your Authorized Rockford Fosgate Dealer install your new accessory.***



## XCard Crossovers

Additional crossover card frequencies are available for specialized requirements. You can get the following XCards from your Authorized Rockford Fosgate Dealer.

XM50	=	50Hz	XM200	=	200Hz
XM70	=	70Hz	XM275	=	275Hz
XM80	=	80Hz	XM400	=	400Hz
XM100	=	100Hz	XM4.5k	=	4,500Hz
XM150	=	150Hz	XM6.5k	=	6,500Hz
			XM00	=	Blank card for custom crossover

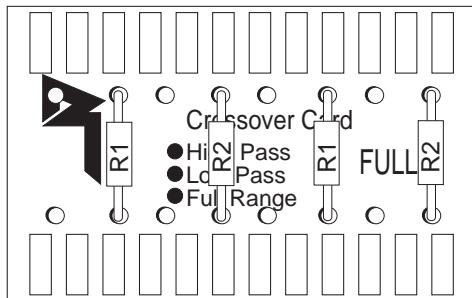

**ATTENTION:** We recommend your Authorized Rockford Fosgate Dealer install your new accessory.

# TROUBLESHOOTING



Symptom	Diagnosis	Remedy
<b>Amplifier does not turn on</b> (Power LED is off)	Voltage applied to the REM terminal of the amplifier is not between 10.5 and 15.5 volts or there is no voltage present.	Check the alternator, battery, fuse, and wiring and repair as necessary. If the voltage is above 15.5 volts, have the electrical system inspected by an authorized car service center.
	Voltage to the B+ terminal of the amplifier is not between 10.5 and 15.5 volts or there is no voltage present.	Check the alternator, battery, fuse, and wiring and repair as necessary. If the voltage is above 15.5 volts, have the electrical system inspected by an authorized car service center.
	Amplifier is not properly grounded.	Check wiring and repair as necessary.
<b>Amplifier has no sound</b> (Power LED is on)	RCA Input from source unit is not connected or not functioning properly.	Check connections, substitute with known working source and cables and repair or replace as necessary.
	XCard is missing or not placed properly in crossover slots.	Check XCard position and repair or replace as necessary.
	Speaker leads are shorted to each other or to the chassis of the vehicle.	Disconnect existing speakers and test with known working speakers and wires. If amplifier plays, check and repair wiring and installation of speakers as necessary.
	Speakers are defective.	Disconnect existing speakers and test with known working speakers. If amplifier plays, check and repair speakers as necessary.



Symptom	Diagnosis	Remedy
<b>Speaker Output Low or Distorted</b>	Input gain signal for amplifier is incorrectly set.	Readjust input gains of amplifier.
	Source unit output too low or source unit has no output.	Check system with known working source and repair or replace original source as needed.
	XCard is missing or not placed properly in crossover slots.	Check XCard position and repair or replace as necessary.
	Low battery voltage or large voltage drops to the amplifier under load.	Check the alternator, battery, fuse, and power and ground wiring. Repair as necessary.
<b>No Output on Rear Channels Only</b> (using 2 inputs)	Signal input switch not configured properly.	Check signal input switch and reconfigure for 2-channel input.
	XCard is missing or not placed properly in crossover slot.	Check XCard position and repair or replace as necessary.
<b>Rear Channels are Non-Fading</b> (using 4 inputs)	Signal input switch not configured properly.	Check signal input switch and reconfigure for 4-channel input.
<b>Amplifier Noise</b> (Turn-on Pop)	Voltage spike from output of preceding component is entering amplifier through input signal.	Disconnect input signal to amplifier and turn amplifier on and off. If noise is eliminated, connect REM lead of amplifier to source unit with a delay turn-on module.
	Voltage spike from remote turn-on lead is entering through REM input terminal.	Use a different 12 volt source for REM lead of amplifier. (i.e., battery direct) If noise is eliminated, use a relay to isolate amplifier from noisy turn-on output.

Symptom	Diagnosis	Remedy
Engine Noise	Noise is radiating into RCA signal cable.	Check connections, run the RCA cables on a different route away from sources of high voltage.
	Bad component in the signal chain.	Check connections, bypass additional components (crossovers and equalizers) between the source unit and the amplifier. Connect one component at a time to determine the culprit. Repair or replace components as necessary.
	Noise is radiating into speaker cables.	Disconnect existing speakers and connect a test speaker to the output terminals of the amplifier. If noise is gone, reroute the speaker cables away from sources of high voltage.
	Multiple grounds in the audio system.	Check ground connections and connect amplifiers, signal processors, and other components to a central location or try a different grounding point on the chassis.
	Ground loop between source unit and antenna.	Check connections, disconnect antenna from source unit. If noise is gone, install an antenna ground loop isolator.

- If noise persists, see your Authorized Rockford Fosgate Dealer.

# **DYNAMIC POWER MEASUREMENTS**

---

## **About the Dynamic Power Measurements**

The Audio Graph PowerCube is a test instrument used to measure the output of an amplifier in accordance with IHF-202 industry standards. The IHF-202 standard is a dynamic power measurement and was developed as a means of measuring power in a manner that best represents the real world operation of an amplifier. Many manufacturers, including Rockford Fosgate, at times will measure amplifier power into a fixed resistor (4 ohm, 2 ohm). While this method is useful in some types of evaluation and testing, it is not representative of an amplifier that is connected to a speaker and playing music.

## **Music**

Music is dynamic; the sound waves are complex and constantly changing. In order to simulate this, the IHF-202 standard calls for the input signal to the amplifier to be a 1kHz bursted tone. This signal is input (on for 20 milliseconds) and reduced 20dB for 480 milliseconds. The signal is gradually increased in level until the amplifier's output exceeds 1% Total Harmonic Distortion (THD). At 1% distortion becomes audible, therefore, any power produced above that level is considered *not usable*. Many manufacturers represent their amplifiers' output power in excess of 10% distortion. They use many names for this measurement, such as Total Maximum Power or Maximum Output Power. This is not indicative of the *actual usable output power*.

## **Listening to Loudspeakers - Not Resistors**

A loudspeaker is not a resistor. A resistor's value (resistance measured in ohms) is fixed. A loudspeaker's impedance is dynamic. It is constantly changing in value, dependent upon the frequency of the input signal. Therefore, measuring power with the amplifier loaded into a 4 ohm resistor is not the same as measuring power with the amplifier connected to a 4 ohm speaker. Most people do not listen to music through a resistor.


A 4 ohm speaker may experience a drop in impedance 4-6 times lower than its nominal (printed) impedance. A speaker will also create phase shifts in the signal that is passed through it. These phase shifts happen because a speaker is an inductor (voice coil) and a capacitor (compliance of the surround/spider), as well as a resistor (voice coil wire).

To simulate a speaker the Audio Graph PowerCube measures output power into 20 different loads. It tests at 8 ohms, 4 ohms, 2 ohms and 1 ohm. Each of these impedances is also tested at  $-60^\circ$ ,  $-30^\circ$ ,  $0^\circ$ ,  $+30^\circ$  and  $+60^\circ$  phase angles. These different impedances and phase angles represent the shifts in impedance and phase that can occur in a typical loudspeaker.

## Information Cubed

The data acquired in the testing procedure is then graphed in the form of a 3-dimensional cube. Hence the name **PowerCube**.

The *Phase Angle* is expressed on the horizontal axis, the *Output Voltage* is presented on the vertical axis and the *Impedance* is displayed on the Z axis. *Output Power*, in watts, is listed on the left hand side for each impedance at each phase angle.

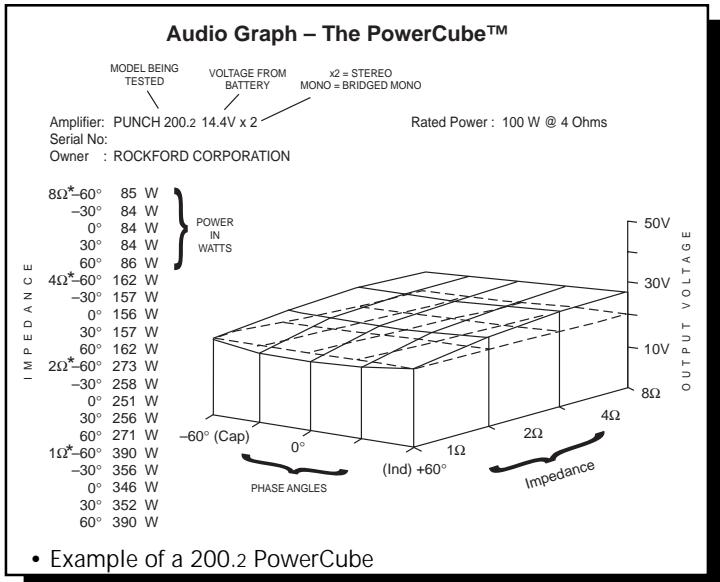

## What is an Amplifier?

An amplifier by definition is a voltage generating device, recreating the signal which is input to it identically but with increased volume. It will be connected to a reactive load (the speaker). The impedance of this load and phase of the signal passing through the load will vary, dependent upon the frequency of the input signal (music).

Therefore, a perfect amplifier will be able to maintain the same output voltage regardless of load characteristics and will not alter the signal it is reproducing. A perfect amplifier when measured by the AudioGraph PowerCube would present data that forms a perfect cube. Unfortunately, amplifiers are not perfect. The laws of physics generally prevent it. A great amplifier is about the best one can hope to attain.

As you can see by the PowerCube and as you will experience by listening, your Punch amplifier is a GREAT AMPLIFIER!

## 160.4 SPECIFICATIONS

---

Continuous Power Rating (Competition Standard) – Measured at 13.8V RMS continuous power <b>per channel</b> , all channels driven into a $4\Omega$ load from 20-20,000Hz with less than 0.05% Total Harmonic Distortion (THD)	<b>20 Watts</b>
RMS continuous power <b>per channel</b> , all channels driven into a $2\Omega$ load from 20-20000Hz, with less than 0.1% Total Harmonic Distortion (THD)	<b>40 Watts</b>
RMS continuous power <b>bridged x 2</b> into a $4\Omega$ load from 20-20000Hz, with less than 0.1% Total Harmonic Distortion (THD)	<b>80 Watts</b>
Dynamic Power Rating (IHF-202 Standard) – Measured at 14.4V 2-Channel bridged into a $4\Omega$ load per channel into a $2\Omega$ load per channel into a $4\Omega$ load	<b>120 Watts</b> <b>60 Watts</b> <b>40 Watts</b>
Signal-to-Noise Ratio (A-weighted)	>100dB
Factory Default Crossover Point Crossover Alignment Dimensions	80Hz Butterworth (.047 $\mu$ f) 12dB/octave $9\frac{5}{8}$ "W x $13\frac{9}{32}$ "L x $2\frac{5}{8}$ "H (24.4cm) x (33.73cm) x (6.6cm)
Damping Factor @ $4\Omega$ (at output connector) Bandwidth Frequency Response Slew Rate IM Distortion (IHF) Input Sensitivity	>150 15Hz-100kHz $\pm$ 3dB 20Hz-20kHz $\pm$ 0.5dB 30 V/ $\mu$ s <0.05% Variable from 150mV to 3V Preset at the factory for 500mV
B+ Fuse Size (external to amplifier) Input Impedance	30 amp ATC 20k ohms

## **240.4 SPECIFICATIONS**

---

Continuous Power Rating (Competition Standard) – Measured at 13.8V RMS continuous power <b>per channel</b> , all channels driven into a $4\Omega$ load from 20-20,000Hz with less than 0.05% Total Harmonic Distortion (THD)	<b>30 Watts</b>
RMS continuous power <b>per channel</b> , all channels driven into a $2\Omega$ load from 20-20000Hz, with less than 0.1% Total Harmonic Distortion (THD)	<b>60 Watts</b>
RMS continuous power <b>bridged x 2</b> into a $4\Omega$ load from 20-20000Hz, with less than 0.1% Total Harmonic Distortion (THD)	<b>120 Watts</b>
Dynamic Power Rating (IHF-202 Standard) – Measured at 14.4V 2-Channel bridged into a $4\Omega$ load per channel into a $2\Omega$ load per channel into a $4\Omega$ load	<b>180 Watts</b> <b>100 Watts</b> <b>60 Watts</b>
Signal-to-Noise Ratio (A-weighted)	>100dB
Factory Default Crossover Point Crossover Alignment Dimensions	80Hz Butterworth (.047μf) 12dB/octave $9\frac{5}{8}"W \times 13\frac{9}{32"}L \times 2\frac{5}{8"}H$ (24.4cm) x (33.73cm) x (6.6cm)
Damping Factor @ $4\Omega$ (at output connector) Bandwidth Frequency Response Slew Rate IM Distortion (IHF) Input Sensitivity	>150 15Hz-100kHz ±3dB 20Hz-20kHz ±0.5dB 30 V/μs <0.05% Variable from 150mV to 3V Preset at the factory for 500mV
B+ Fuse Size (external to amplifier) Input Impedance	50 amp AGU 20k ohms

# **LIMITED WARRANTY INFORMATION**

---

Rockford Corporation offers a limited warranty on Rockford Fosgate products on the following terms:

- **Length of Warranty**

3 years on electronics	90 days on electronic B-stock (receipt required)
2 years on source units	30 days on speaker B-stock (receipt required)

- **What is Covered**

This warranty applies only to Rockford Fosgate products sold to consumers by Authorized Rockford Fosgate Dealers in the United States of America or its possessions. Product purchased by consumers from an Authorized Rockford Fosgate Dealer in another country are covered only by that country's Distributor and not by Rockford Corporation.

- **Who is Covered**

This warranty covers only the original purchaser of Rockford product purchased from an Authorized Rockford Fosgate Dealer in the United States. In order to receive service, the purchaser must provide Rockford with a copy of the receipt stating the customer name, dealer name, product purchased and date of purchase.

- **Products found to be defective** during the warranty period will be repaired or replaced (with a product deemed to be equivalent) at Rockford's discretion.

- **What is Not Covered**

1. Damage caused by accident, abuse, improper operations, water, theft
2. Any cost or expense related to the removal or reinstallation of product
3. Service performed by anyone other than Rockford or an Authorized Rockford Fosgate Service Center
4. Any product which has had the serial number defaced, altered, or removed
5. Subsequent damage to other components
6. Any product purchased outside the U.S.
7. Any product not purchased from an Authorized Rockford Fosgate Dealer

- **Limit on Implied Warranties**

Any implied warranties including warranties of fitness for use and merchantability are limited in duration to the period of the express warranty set forth above. Some states do not allow limitations on the length of an implied warranty, so this limitation may not apply. No person is authorized to assume for Rockford Fosgate any other liability in connection with the sale of the product.

- **How to Obtain Service**


Please call 1-800-669-9899 for Rockford Customer Service. You must obtain an RA# (Return Authorization number) to return any product to Rockford Fosgate. You are responsible for shipment of product to Rockford.

Ship to: **Electronics**

Rockford Corporation  
Warranty Repair Department  
2055 E. 5th Street  
Tempe, AZ 85281  
RA#:\_\_\_\_\_

Ship to: **Speakers**

Rockford Acoustic Design  
(Receiving-speakers)  
609 Myrtle N.W.  
Grand Rapids, MI 49504  
RA#:\_\_\_\_\_

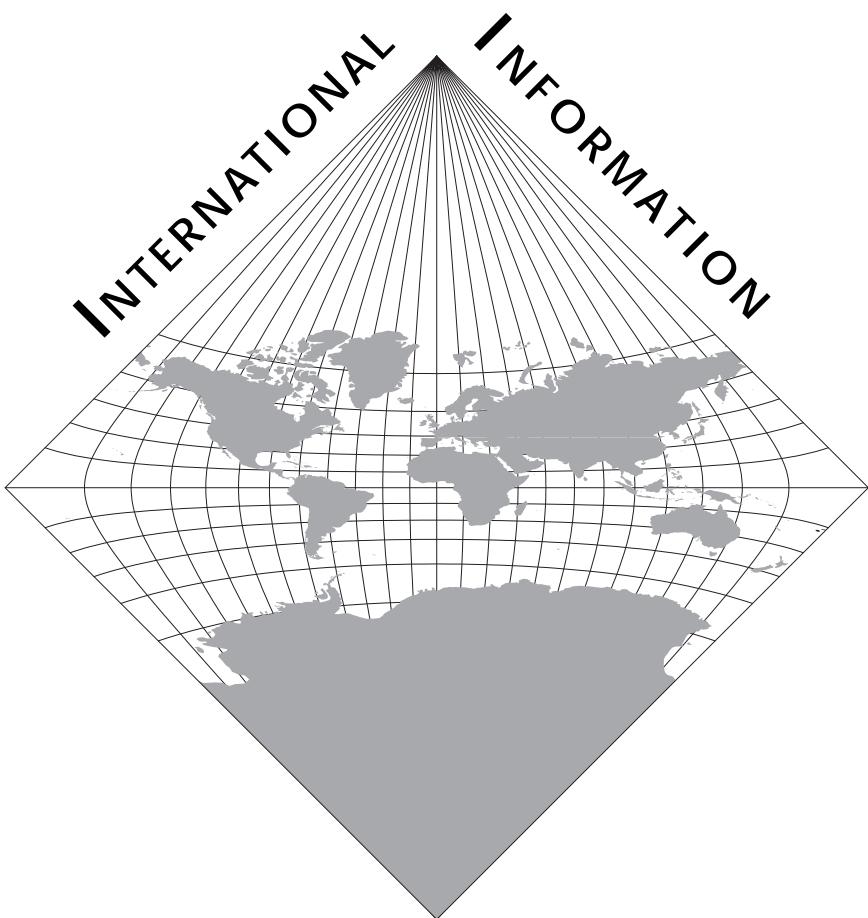

**LEA DETENIDAMENTE LAS SIGUIENTES INSTRUCCIONES DE INSTALACION DEL PRODUCTO. EVITARA POSIBLES DAÑOS A VD., AL VEHICULO O AL PRODUCTO.**

## **INTRODUCCION**

---

Los Punch 160.4 y 240.4 son amplificadores de 4 canales que ofrecen 160/240 vatios RMS respectivamente. Ambos amplificadores incorporan un conmutador para entrada de 2 o 4 canales, de manera que no es necesario utilizar derivadores de linea. Hay un par de tarjetas de filtro XCard que permiten la configuración de los amplificadores para su uso con cualquier sistema de altavoces sin necesidad de procesadores externos. Los Punch 160.4 y 240.4 son potentes amplificadores con características únicas a un precio competitivo.

Recomendamos que el montaje sea realizado por un instalador autorizado Rockford Fosgate. Si prefiere instalarlo usted mismo asegúrese de leer el manual en su totalidad.

## **UBICACIÓN PARA EL MONTAJE**

---

### **Montaje en el Maletero**

Monte el amplificador verticalmente con las líneas del radiador orientadas de arriba hacia abajo. De esta manera conseguira la mejor ventilacion.

### **Montaje en el Compartimento de Pasajeros**

El montaje en el compartimento de pasajeros sera eficiente en funcion de la ventilacion que tenga el amplificador. Si va a instalar el amplificador bajo un asiento deberá dejar al menos 2.5cm libres sobre la carcasa del amplificador.

### **Instalacion**

Por seguridad, desconecte el terminal negativo de la bateria antes de comenzar la instalacion.

### **Terminal B+**

El cable B+ debe ir provisto de un fusible a una distancia no mayor de 45cm de la bateria. Prepare el cable e instale el portafusibles en el compartimento del motor. Las conexiones han de ser impermeables.


### **Terminal GND**

Prepare un trozo de cable para usarlo como toma de masa. Prepare un punto de masa en el chasis rascando y eliminando la pintura de la superficie de metal y limpielo de toda suciedad asegure el cable al chasis con un tornillo.


### **Terminal REM**

Conecte el cable REM a un punto de +12V conmutable. La señal se suele coger de la salida auto antena del radio cassette si este no tiene salida remote.

## Funcionamiento Estereo

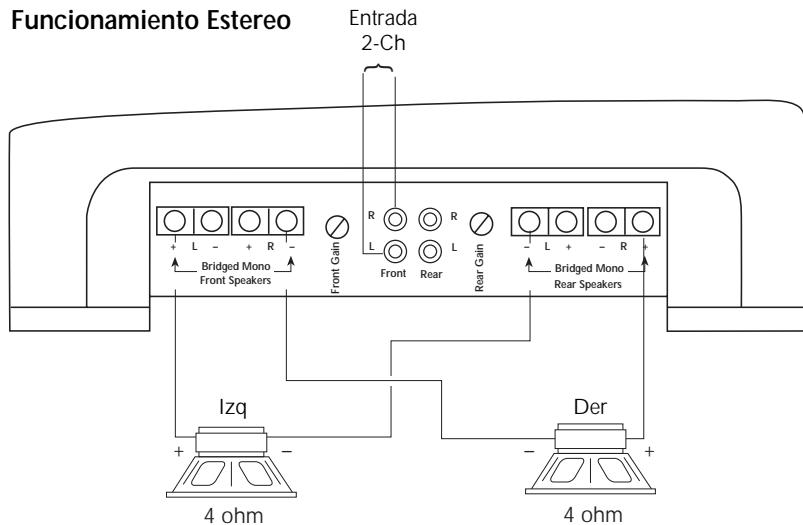


## Entrada 2 canales

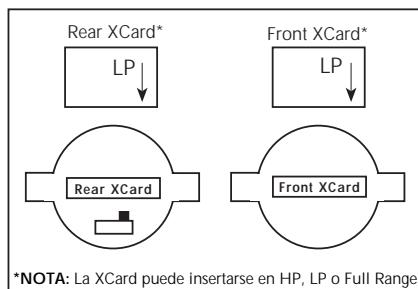


- Los RCAs se conectan a la entrada Front
- El Commutador de Entrada de Señal se fija a 2-Channel input
- La Ganancia de los canales frontal y posterior ha de ser igual para equilibrar los canales izquierdo y derecho
- La Impedancia para el canal izquierdo puenteado no debe ser menor de  $4\Omega$
- La Impedancia para el canal derecho puenteado no debe ser menor de  $4\Omega$
- Las XCards para front y rear han de ser iguales y fijadas en la misma posición

## Funcionamiento en 4 canales Estereo/Puente

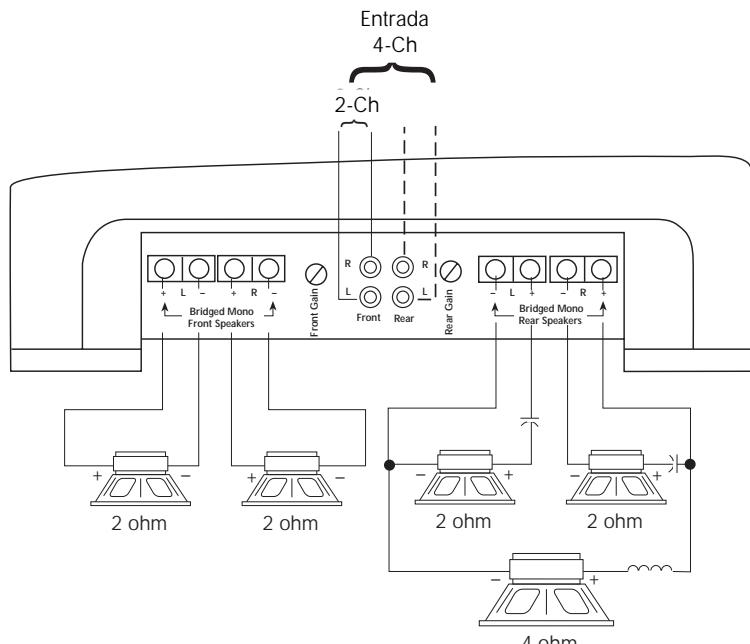


Entrada 2 canales

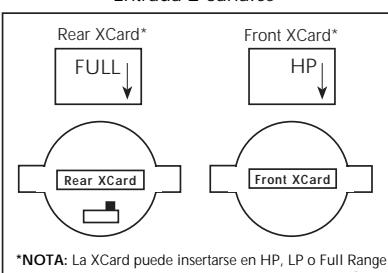

\*NOTA: La XCard puede insertarse en HP, LP o Full Range

Entrada 4 canales

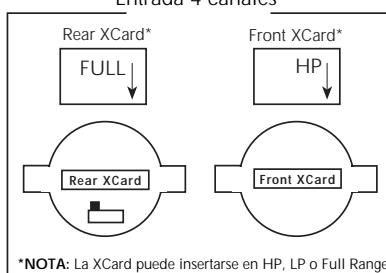

\*NOTA: La XCard puede insertarse en HP, LP o Full Range

- Los **RCA**s se conectan a las entradas Front y Rear
- El **Comutador de Entrada de Señal** se fija a 2-Channel input o 4-Channel input
- La **Ganancia** de los canales frontal y posterior funciona independientemente
- La **Impedancia** para los canales frontal y posterior estéreo no debe ser *menor de 2Ω*
- La **Impedancia** para el canal posterior puenteado no debe ser *menor de 4Ω*
- La **XCard** para front se puede posicionar en HP, LP o Full Range
- La **XCard** para rear ha de estar en Full Range
- Se necesitarán **filtros pasivos adicionales** para la operación simultánea mono/estéreo

**ATTENTION:** Veuillez lire les instructions suivantes pour l'installation de cet amplificateur. Ne pas les suivre pourrait causer des blessures ou endommager le véhicule.

## **INTRODUCTION**

---

Les Punch 160.4 et 240.4 sont des amplificateurs à 4 canaux délivrant respectivement 160 et 240 watts RMS. Ces 2 amplificateurs utilisent un interrupteur 2/4 canaux qui élimine le besoin d'un séparateur de signal. Une paire de cartes de filtrage interne permet de configurer l'amplificateur afin d'être utilisé dans la plupart des configurations sans dépense supplémentaire.

Nous vous recommandons fortement de faire installer votre nouvel amplificateur Punch par un dealer agréé Rockford Fosgate. Si vous décidez néanmoins de l'installer vous-même, assurez-vous de lire l'entièreté de ce manuel avant de commencer.

## **MONTAGE**

---

### **Montage dans le coffre**

Monter l'amplificateur verticalement avec les rainures de haut en bas ce qui lui permet de refroidir plus facilement.

### **Montage dans l'habitacle**

Monter l'amplificateur dans l'habitacle ne pose aucun problème, du moment qu'il y ait assez d'air pour le refroidir. Si vous montez l'ampli en dessous du siège, prévoyez 3 cm d'air autour du radiateur.

### **Installation**

Pour votre sécurité, déconnectez la borne négative de la batterie du véhicule avant de commencer l'installation.

### **Terminal B+**

Il est impératif qu'il y ait un fusible sur le câble pour la connexion à la masse. Préparez le châssis en grattant la peinture de la surface métallique et nettoyez la saleté et l'huile. Attachez le câble au châssis avec une vis.


### **Terminal GND**

Préparez une longueur de câble pour la connexion à la masse. Préparez le châssis en grattant la peinture de la surface métallique et nettoyez la saleté et l'huile. Attachez le câble au châssis avec une vis.


### **Terminal REM**

Connectez le fil REM à une commande 12 volts positive de la source. La commande 12 volts est habituellement prise sur la sortie antenne électrique de la source ou la commande accessoire. Si la source ne dispose pas de ces sorties, nous vous recommandons d'installer un interrupteur qui fournira un positif 12 volts au REM de l'amplificateur.

## Opération stéréo

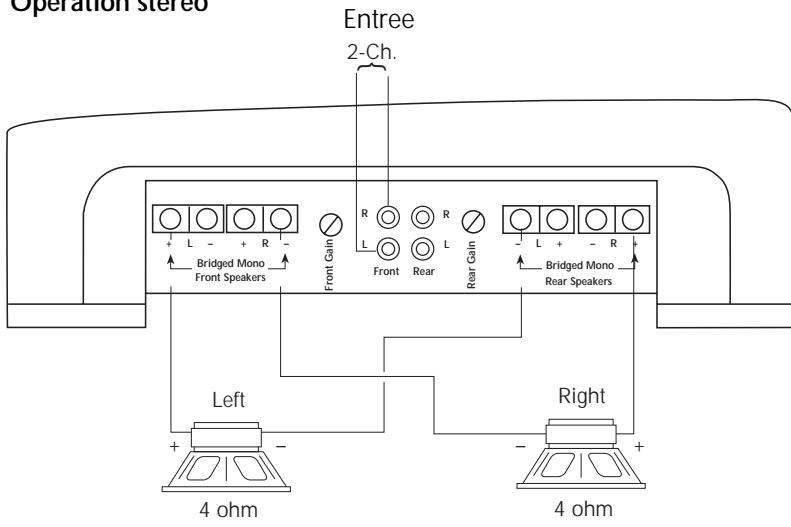


2-Channel Input

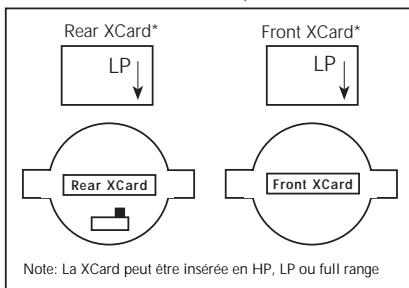



- Le **câble RCA** est connecté à l'entrée avant
- L'**interrupteur de signal** d'entrée est commuté sur la position 2 canaux
- Les **gains** avant et arrière sont ajusté de manière similaire pour équilibrer les canaux gauche et droit
- L'**impédance** minimum pour le canal bridgé de gauche est de  $4\Omega$
- L'**impédance** minimum pour le canal bridgé de droite est de  $4\Omega$
- Les **cartes de filtrage** avant et arrière sont installées de manière identique en passe haut, pass-bas ou full range

## Fonctionnement 4 canaux stereo/mono

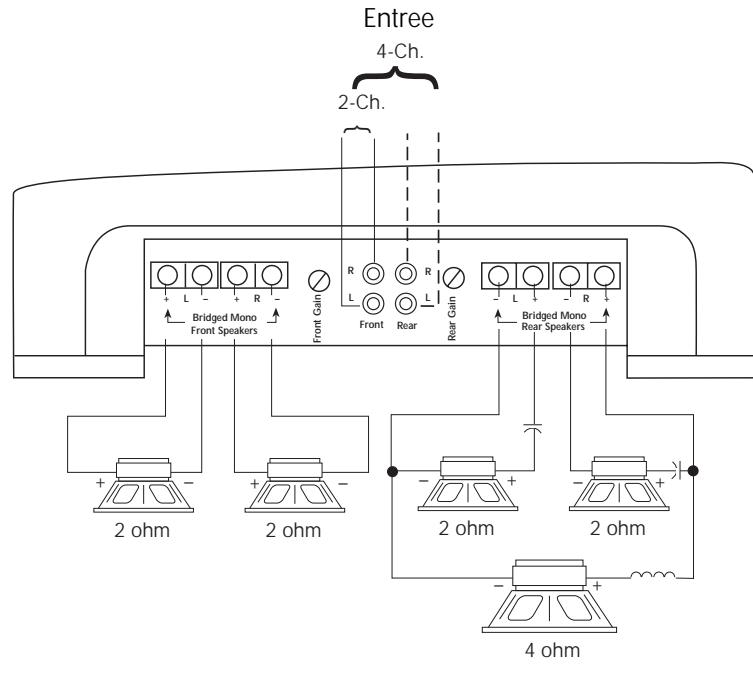

2-Channel Input

4-Channel Input

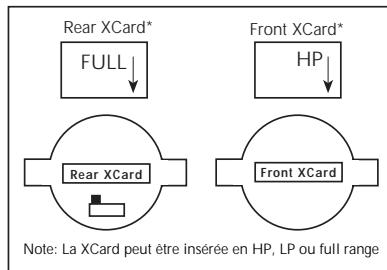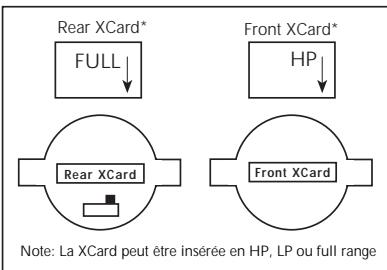

- Les cables RCA sont connectés aux entrées avant et arrière
- L'interrupteur de signal d'entrée est commuté sur la position 2 ou 4 canaux
- Les gains avant et arrière sont ajusté indépendamment
- L'impédance minimum pour les canaux stereo avant et arrière est de minimum  $2\Omega$
- L'impédance pour le canal arrière bridgé est de minimum  $4\Omega$
- La carte de filtrage avant est installée en passe haut, pass-bas ou full range
- La carte de filtrage arrière est installée en full range
- Des filtres passifs sont nécessaires pour une utilisation correcte stereo/mono

**BITTE LESEN SIE DIESE GEBRAUCHSANLEITUNG ZUERST SORGFÄLTIG DURCH. DAS KANN SIE VOR DEM FALSCHEN EINSATZ, AUSFALLEN ODER SOGAR BESCHÄDIGUNG DES PRODUKTES ODER IHRES FAHRZEUGES SCHÜTZEN.**

## **EINLEITUNG**

---

Die Punch 160.4 und 240.4 sind 4-Kanal Verstärker, welche 160 bzw. 240 Watt RMS abgeben können. Beide Verstärker einen 2/4-Kanal Eingangswahlschalter, dadurch werden keine Y-Adapter mehr benötigt. Zwei eingebaute Aktivweichen-Module erlauben es, den Verstärker so anzupassen, das dieser mit den am häufigsten verwendeten Systemen hantoniert, ohne das man externe Prozessoren einsetzen muß. Die Punch 160.4 und 240.4 sind kraftvolle 4-Kanal Verstärker mit integrierten Besonderheiten, welche zu einem konkurrenzlos günstigen Preis angeboten werden.

Wir empfehlen Ihnen, Ihren neuen Verstärker, von einem unserer autorisierten Rockford Hzuandler einzubauen zu lassen. Sollten Sie den Verstärker selber einzubauen, so beachten Sie bitte diese Hinweise, bevor Sie mit dem Einbau beginnen.

## **EINBAUORT**

---

### **Im Fahrzeugkofferraum**

Der vertikale Einbau der Endstufen, das bedeutet, daß die Kühlrippen von oben nach unten verlaufen, gibt dem Verstärker die beste Kühlung.

### **Auf der Beifahrerseite**

Sollte der Verstärker auf der Beifahrerseite montiert werden, so ist es sehr wichtig, für eine ausreichende Kühlung zu sorgen. Sollte der Verstärker z.B. unter dem Beifahrersitz montiert werden, sollte dem Kühlkörper mindestens ein Luftspalt von 3 cm bleiben, um so für eine ausreichende Kühlung zu sorgen.

### **Einbau**

Zur Sicherheit klemmen Sie den Negativ-Pol der Batterie während des gesamten Einbaues ab.

### **B+ Anschluss**

Die Plus-Leitung MUß ca. 40 cm nach dem Plus-Pol der Batterie abgesichert sein. Parapieren Sie die Kabellängen und montieren Sie den Sicherungshalter im Motorraum. ALLE Verbindungen müssen wasserdicht sein.

### **GND Anschluss**


Parapieren Sie Ihr Kabel für die Negativ Leitung (Erdung). Parapieren Sie die Anschlußstelle des Erdungskabels, indem Sie das Metall gründlich reinigen und vom Lack befreien. Befestigen Sie nun die Erdung an dieser Stelle mit einer Schraube.

DEUTSCH


## REM Anschluss

Verbinden Sie das Ein- und Ausschaltungskontroll-Kabel mit Ihrem Radio (12 Volt positiv). Normalerweise verwenden Sie hierfür die Ant.-Remote Ihres Radios oder ein eigens dafür vorgesehenes Kabel (Amp-Remote). Sollte Ihr Radio diesen Anschluß nicht besitzen, so verwenden Sie eine 12 Volt Spannung, die Sie durch einen Schalter ein- und ausschalten können.

### Stereo Operation

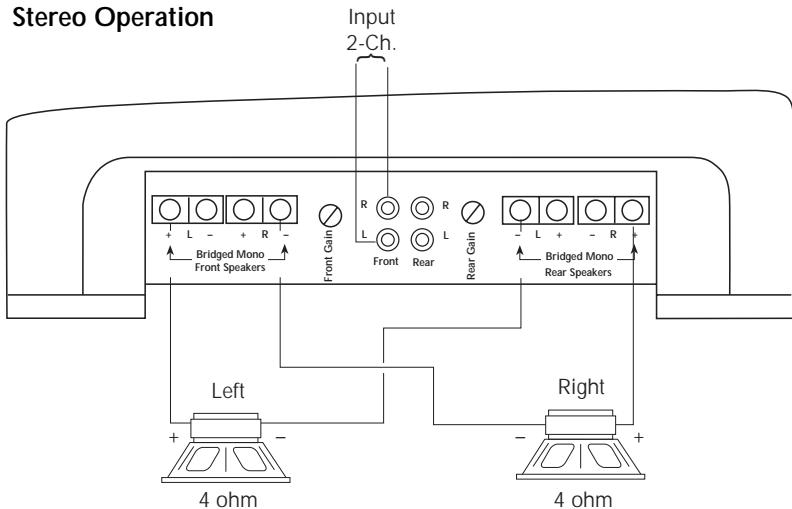


2-Channel Input

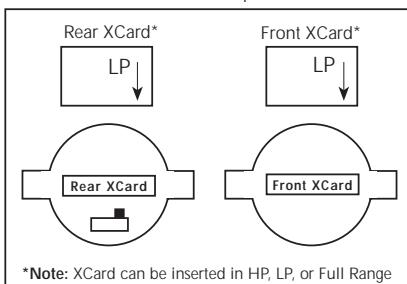

- Die Cynch-Kabel sind mit den Froneingängen verbunden
- Der Eingangswahlschalter ist auf 2-channel eingestellt
- Die Gain-Kontrolle für Front und Heck sollte gleich eingestellt werden, um den linken und rechten Kanal auszubalancieren
- Die Impedanz für gebrückten linken Kanal sollte mindestens  $4\Omega$  betragen
- Die Impedanz für gebrückten rechten Kanal sollte mindestens  $4\Omega$  betragen
- Die Aktivweichen-Module für Front und Heck gleich einsetzen, als Hochpass, Tiefpass oder Full Range

## 4-Kanal Stereo/Einzel gebrückte Operation

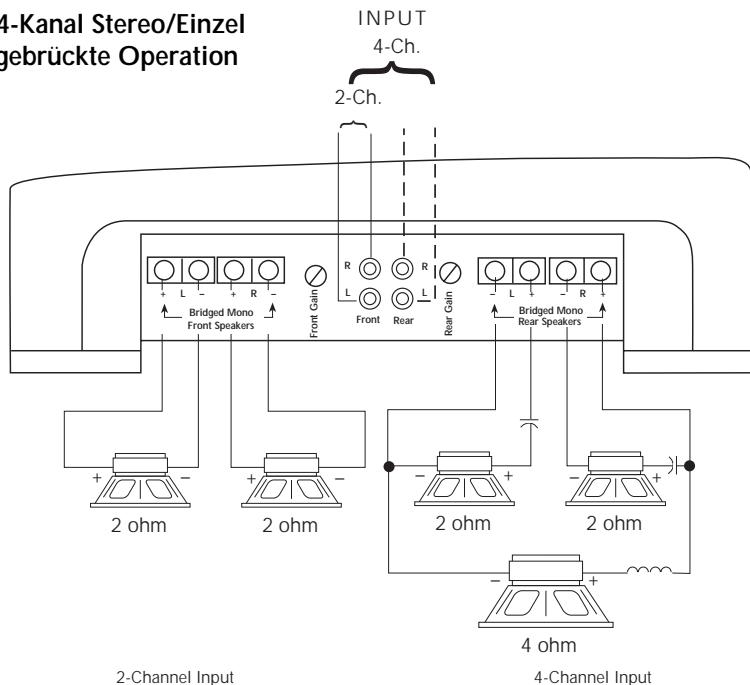

2-Channel Input

4-Channel Input

Rear XCard\*



Front XCard\*

Front XCard\*



\*Note: XCard can be inserted in HP, LP, or Full Range

Rear XCard\*



Front XCard\*



\*Note: XCard can be inserted in HP, LP, or Full Range

- Die Cynch-Kabel sind mit den Fronteingängen oder den Front- und Heckeingängen verbunden
- Der Eingangswahlschalter ist auf 2-channel oder 4-channel eingestellt
- Die Gain-Kontrolle für Front und Heck arbeitet unabhängig voneinander
- Die Impedanz für die Front- und Heck Stereokanäle sollte mindestens  $2\Omega$  betragen
- Die Impedanz für den gebrückten hinteren Kanal sollte mindestens  $4\Omega$  betragen
- Die Aktivweichen-Module für Front and Heck gleich einsetzen, als Hochpass, Tiefpass oder Full Range
- Die Aktivweichen-Module für Heck ist als Full Range gesteckt
- Passive Frequenzweichen werden für korrekte Stereo/Mono Operationen benötigt

**ATTENZIONE: SI PREGA DI LEGGERE LE SEGUENTI ISTRUZIONI PER L'INSTALLAZIONE DI QUESTO PRODOTTO. IL NON SEGUIRLE POTREBBE RISULTARE SERIAMENTE DANNOSO PER LA PERSONA O PER IL VEICOLO.**

## **INTRODUZIONE**

---

I Punch 160.4 e 240.4 sono amplificatori 4 canali in grado di erogare rispettivamente 160 e 240 watt RMS. Entrambi questi amplificatori impiegano uno switch di selezione 2/4 canali evitando l'impiego di sdoppiatori di segnale. Una coppia di XCard interne permette agli amplificatori di essere impiegati nelle configurazione piú in voga senza richiedere l'impiego di costosi processori esterni. I Punch 160.4 e 240.4 sono potenti amplificatori con caratteristiche integrate che li rendono molto appetibili, anche da un punto di vista di prezzo.

Raccomandiamo fermamente di fare installare il vostro nuovo amplificatore da un installatore autoizzato Rockford Fosgate. Se scegliete di procedere da soli con l'installazione assicuratevi di leggere attentamente tutto il manuale prima di procedere.

## **DOVE POSIZIONARLO**

---

### **Nel Bagagliaio**

Montando l'amplificatore su una superficie in verticale con le alette direzionate dall'alto verso il basso si garantirà un miglior raffreddamento dell'amplificatore.

### **Nell'abitacolo**

Montare l'amplificatore nell'abitacolo si avrà un funzionamento regolare se si garantisce un flusso d'aria sufficiente. Per l'installazione sotto un sedile, è necessario avere uno spazio di almeno 3 cm attorno a tutto l'amplificatore.

### **Installazione**

Per sicurezza, scollare il polo negativo della batteria dell'auto prima di iniziare l'installazione.

### **Terminale B+ (cavo positivo)**

Il cavo positivo deve essere protetto da un fusibile a non piú di 45 cm dalla batteria. Terminare il cavo e installare il fusibile nel vano motore. Tutte le connessioni devono essere a prova d'acqua.


### **Terminale GND (cavo negativo)**

Decidere la lunghezza del cavo e terminarlo. Preparare la massa grattando la vernice dal telaio dell'auto ed eliminando tracce di olio o sporco. Fissare il cavo di massa al telaio con una vite.


## Terminale REM (Consenso di accensione)

Collegare il cavo REM ad un positivo presente solo ad autoradio accesa (normalmente il cavo pilota dell'antenna elettrica o il cavo accessori dell'autoradio). Se la sorgente non dovesse essere equipaggiata con queste uscite, la soluzione raccomandabile è di inserire un interruttore su un cavo positivo e connettersi all'amplificatore.

### Funzionamento Estereo

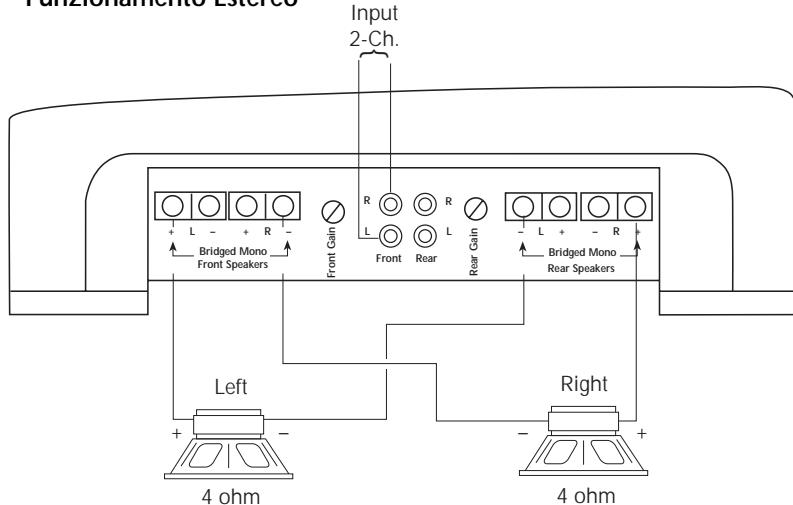


2-Channel Input

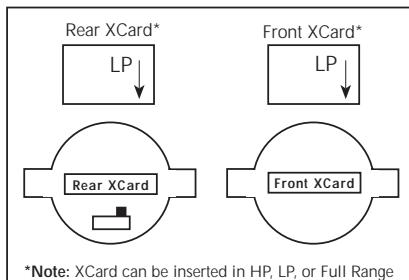


- **RCA**s collegati agli ingressi anteriori
- **Switch di configurazione** settato su 2 ingressi
- I **Gain** anteriori e posteriori devono essere regolati uguali per bilanciare destra e sinistra
- L'**impedenza** per il canale a ponte sinistro deve essere minimo  $4\Omega$
- L'**impedenza** per il canale a ponte destro deve essere minimo  $4\Omega$
- Le **XCard** anteriori e posteriori devono essere posizionate nello stesso modo passa-alto, bassa-basso o gamma intera

## Funzionamento 4 canali stereo/mono singolo

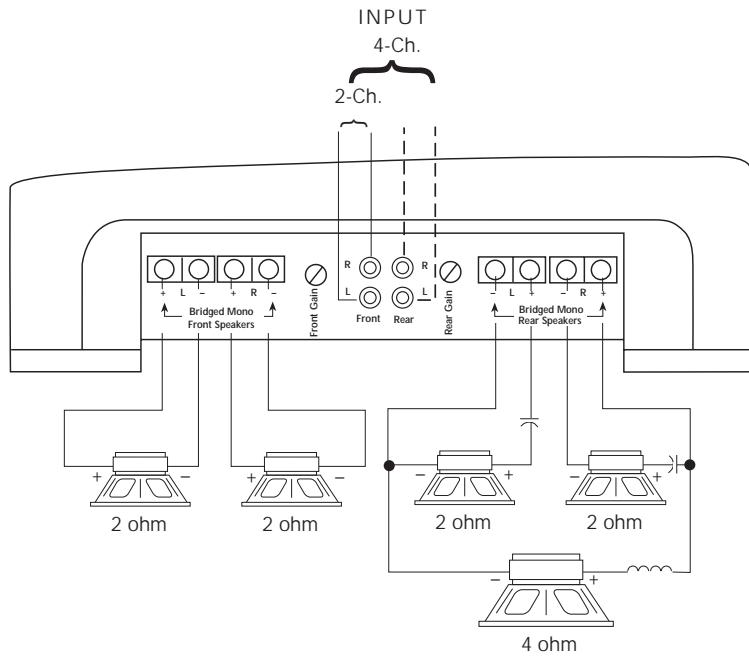


2-Channel Input

4-Channel Input

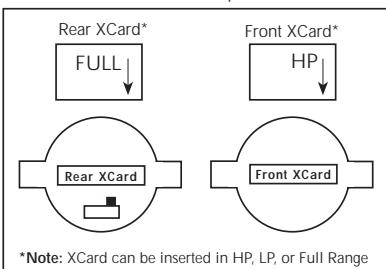

\*Note: XCard can be inserted in HP, LP, or Full Range

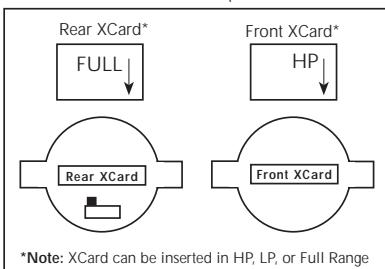

\*Note: XCard can be inserted in HP, LP, or Full Range

- RCA collegati agli ingressi anteriori e posteriori
- **Switch di configurazione** regolato su 2 o 4 ingressi
- I Gain anteriori e posteriori funzionano in modo indipendente
- L'impedenza per i canali anteriori e posteriori deve essere minimo  $2\Omega$
- L'impedenza per il canale a ponte posteriore deve essere minimo  $4\Omega$
- La XCard anteriore può essere passa-alto, bassa-basso o gamma intera
- La XCard posteriore deve essere gamma intera
- Crossover passivi sono indispensabili per un corretto funzionamento stereo/mono

## **NOTES**

---

**Rockford Fosgate**  
Rockford Corporation  
546 South Rockford Drive  
Tempe, Arizona 85281 U.S.A.  
In U.S.A., (602) 967-3565  
In Europe, Fax (49) 4207-801250  
In Japan, Fax (81) 559-79-1265